SERVICE MANUAL

FISHER

DIGITAL COMPACT DISC PLAYER

AD-M87

(EUROPE/SPAIN)

137 338 40

SPECIFICATIONS

AUDIO CHARACTERISTICS

Frequency Response ..... 20 Hz – 20 kHz
Harmonic Distortion ..... Less than 0.07 % (1 kHz)
S/N Ratio ..... More than 90 dB
Wow and Flutter ..... Below measurable limits
Channel Separation ..... More than 80 dB (1 kHz)
Output Voltage max. ..... 2 Vrms

FUNCTIONS

Instant Program Selection ..... Sequential, with F-FWD and F-BACK buttons
Index ..... Sequential, with SCAN/INDEX ▶| and |◀ buttons (Stop mode only)
Fast-Forward/Back ..... Fast-forward/back with sound
Remain Time Display ..... With TIME button (during normal disc play only)
Program Reset ..... Press STOP button twice (during programmed disc play)
Pause ..... Each track
Disc Loading ..... Motor driven horizontal loading

DIGITAL SIGNAL PROCESSING

Optical Pickup ..... 3-beam laser
Error Correction ..... CIRC
Sampling Frequency ..... 44.1 kHz
D/A Conversion ..... 16-bit linear
Filter ..... Digital filter + (4-pole LC filter)

GENERAL

Power requirements ..... 110/220 VAC (50 Hz) 12 W
Dimensions (WxHxD) ..... 360 x 95 x 310 mm
Weight (approx.) ..... 3.4 kg

– Specifications and design are subject to change without notice. –

REFERENCE No. WM-570054

SAFETY CERTIFICATION

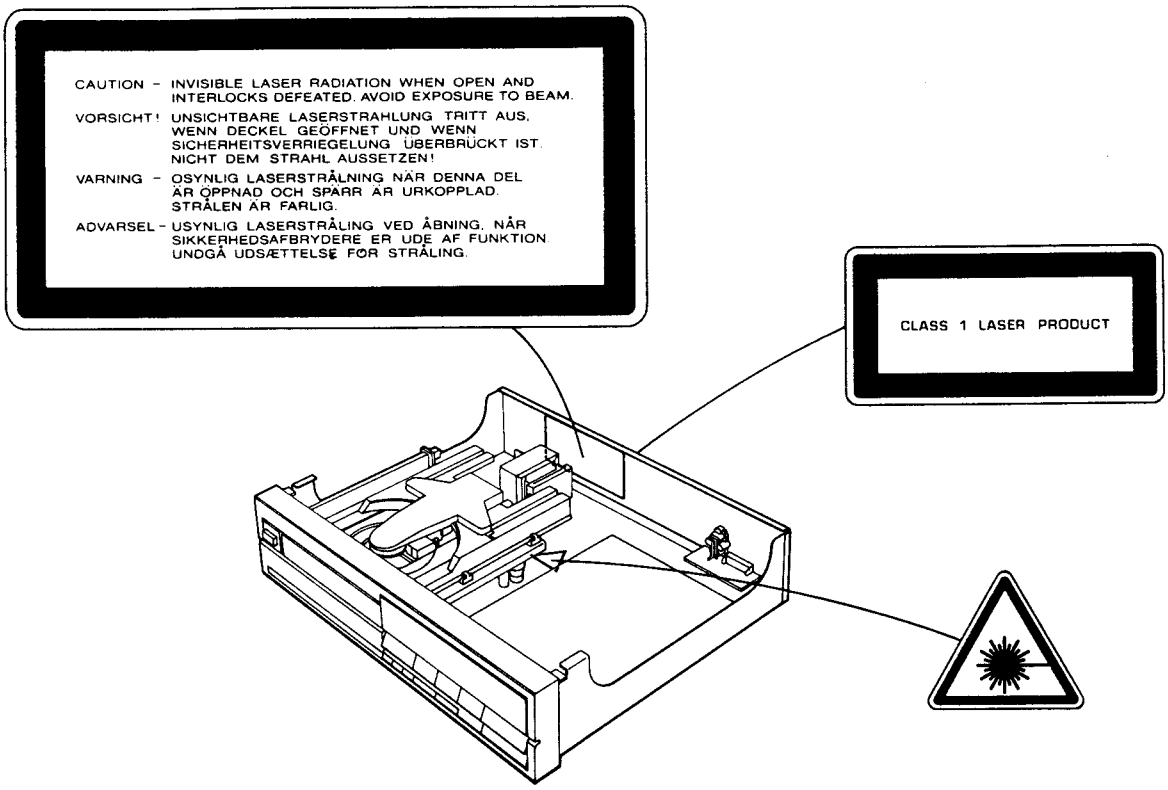
CAUTION - INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.
VORSICHT! UNSICHTBARE LASERSTRAHLUNG TRITT AUS, WENN DECKEL GEÖFFNET UND WENN SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT IST. NICHT DEM STRAHL AUSSETZEN!
VARNING - OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRR ÄR URKOPPLAD. STRÅLEN ÄR FARLIG.
ADVARSEL - USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION UNDGÅ UDSÆTTELSE FOR STRÅLING.
CLASS 1 LASER PRODUCT

CAUTION – USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

THE COMPACT DISC PLAYER SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT QUALIFIED SERVICE PERSONNEL.

LASER BEAM RADIATION SPOT

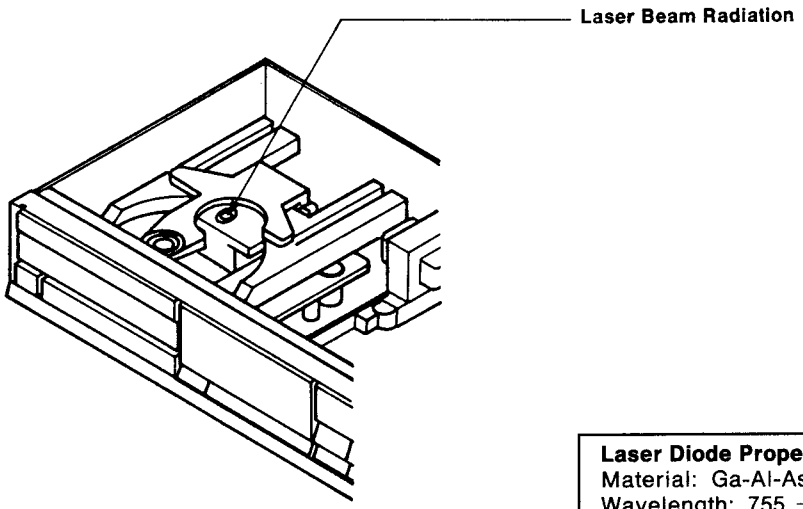

Laser Diode Properties
Material: Ga-Al-As
Wavelength: 755 – 815 nm (25°C)
Laser Output: Continuous Wave max.0.5 mW

CABINET & CHASSIS PARTS LIST/EXPLODED VIEW

Ref. No.	Part No.	Description	Q'ty
PACKAGE			
	620 148 3871	Pad (Right)	1
	620 148 3888	Pad (Left)	1
	620 190 3058	Individual Carton	1
	620 148 8012	Sheet Polyethylene	1
	620 148 9118	Sheet Patching	1
	620 152 7452	Serial No. Sheet	2
ACCESSORIES			
	620 017 5685	Connector 10P Assy	1
	620 021 7385	RCA Cord 700mm Black	1
	620 057 8783	Bag Fan	1
	620 152 2624	Certificate Card	1
	620 152 7452	Serial No. Sheet	1
	620 190 0675	Explanatory Booklet	1
CABINET			
	620 188 6191	Connector 9P Assy [CN3]	1
	620 022 3454	Terminal Lug	1
	620 061 2340	Notes (Laser)	1
	620 061 2401	Notes (Laser)	1
	620 061 2418	Notes (Laser)	1
	620 152 7452	Serial No. Sheet	1
1	620 191 7376	Knob Assy	1
2	620 032 3376	Leg Assy	4
3	620 190 4314	Escutcheon Dial Assy	1
4	620 039 7537	Plate Bottom	1
5	620 045 1178	Cover Decorate	1
6	620 048 7498	Chassis Main	1
7	620 190 2891	Panel Rear	1
8	620 050 4317	Mount P.C.B.	4
9	620 050 4409	Mount P.C.B.	1
10	620 052 1376	Shaft	1
11	620 053 2129	Bushing (Power Cord)	1
12	620 053 9869	Reflector	1
13	620 190 2907	Filter	1
14	620 090 7811	Cover	1
15	620 111 9664	Knob (Power)	1
16	620 115 4375	Holder Mecha	4
17	620 124 3437	Cushion Rubber	4
18 ⚠	620 023 7550	Power Cord	1
19 ⚠	620 191 0759	Power Trans	1
31	620 191 2920	Main P.C.B. Assy	1
32	620 191 2913	Power Switch P.C.B. Assy	1
33	620 191 2777	Lamp P.C.B. Assy	1
34	620 191 4603	Rear P.C.B. Assy	1
35	620 191 2784	Control P.C.B. Assy	1
41	411 020 7007	SCR S-TPG BRZ 3X20	3
42	411 020 7700	SCR S-TPG BRZ 3X6	5
43	411 099 9704	SCR S-TPG BRZ 3X6	12
44	411 021 2704	SCR S-TPG BIN 2.6X6	1
45	411 021 3107	SCR S-TPG BIN 2.6X8	2
46	411 021 6603	SCR S-TPG BIN 3X8	1
47	411 021 5903	SCR S-TPG BIN 3X6	8
48	620 051 4156	Screw (C Tite)	2
49	412 024 6300	SPECIAL SCREW	4
50	411 004 5609	NUT HEX 4	2
51	411 094 4209	WASHER Z 5.5X12X1	2

NOTES:

1. Parts order must contain Model Number, Part Number and Description.
2. Ordering quantity of screws and resistors must be multiple of 10 pcs.

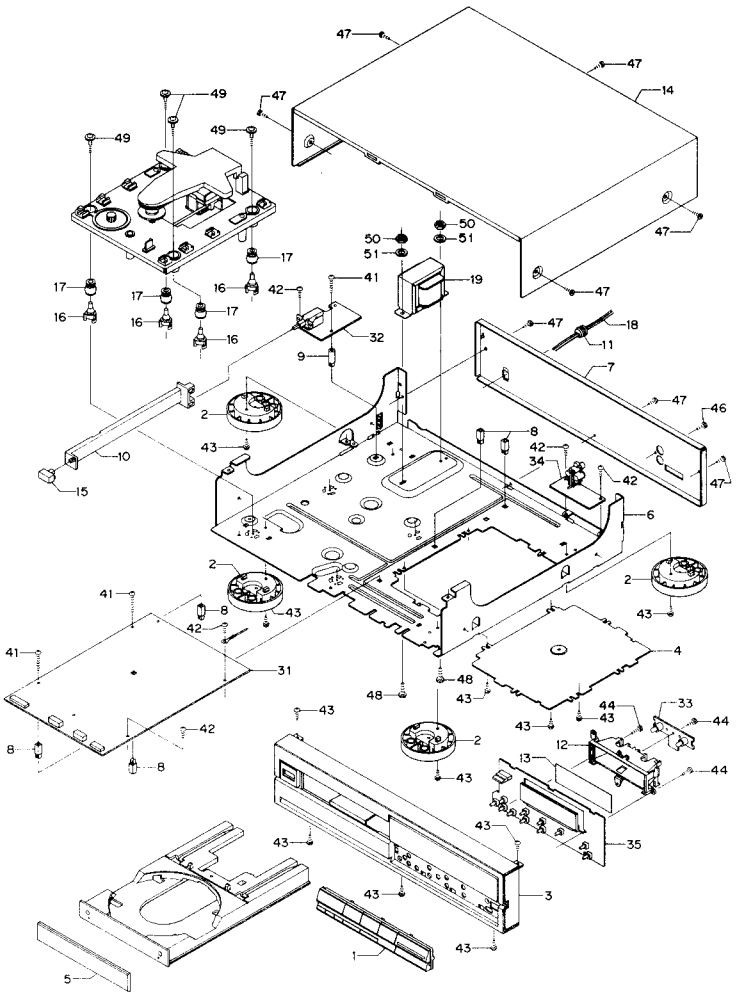

PRODUCT SAFETY NOTICE

Each precaution in this manual should be followed during servicing. Components identified with the IEC symbol ⚠ in the parts list and the schematic diagram designate components in which safety can be of special significance. When replacing a component identified with ⚠, use only the replacement parts designated, or parts with the same ratings of resistance, wattage or voltage that are designated in the parts list in this manual. Leakage-current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before returning the product to the customer.

MECHANISM PARTS LIST/EXPLODED VIEW

Ref. No.	Part No.	Description	Q'ty
MECHANISM			
1	620 062 6170	Pick-up Assy 88	1
2	620 015 3744	Lever Switch (Open) [S101]	1
3	620 016 2401	Leaf Switch (Pick-up Inner) [S102]	1
4	620 189 0426	Motor (Sled Motor) [M102]	1
5	620 189 0433	Motor (Spindle Motor) [M101]	1
6	620 051 4279	Screw (B Tite Sems)	2
7	620 051 4316	Screw	1
8	620 081 5963	Chassis Assy	1
9	620 185 9898	Chassis Sub Assy	1
10	620 082 7478	Turntable Assy	1
11	620 083 3974	Arm Assy	1
12	620 085 6553	Magnet Assy	1
13	620 190 6547	Table Load	1
14	620 185 9911	Table CD	1
15	620 119 1530	Holder Disc	1
16	620 123 0772	Screw Washer	2
17	620 184 9905	Pad Disc (Felt)	4
18	620 125 1487	Washer	2
19	620 127 9429	Gear Pick-up	1
20	620 127 9436	Gear Motor	1
21	620 127 9467	Gear Table Load	1
22	620 127 9474	Gear Pick-up Rack	1
23	620 185 9973	Gear Load Pick-up	1
24	620 185 9980	Gear Load T.L	1
25	620 185 9997	Gear	1
26	620 186 0009	Belt	1
27	620 129 5986	Flap Disc Cramp	1
28	620 186 0023	Pulley	1
29	620 186 0030	Lever Hold Disc Left	1
30	620 186 0047	Lever Hold Disc Right	1
31	620 133 4081	Shaft Pick-up	2
32	620 133 4098	Shaft Gear S	1
33	620 186 0054	Shaft Pulley	1
34	620 186 0061	Spring Lever Left	1
35	620 186 0078	Spring Lever Right	1
36	620 139 1558	Spring Flap Disc CR	1
37	620 139 1565	Spring Arm	1
51	411 108 0104	SCR FLT PCS 2X5	2
52	411 099 0701	SCR PAN PCS 1.7X3	4
53	411 020 5409	SCR S-TPG BRZ 2.6X14	3
54	411 020 7700	SCR S-TPG BRZ 3X6	1
55	411 022 7807	SCR S-TPG PAN 2X6	1
56	411 104 6605	SCR TPG PAN 1.7X10	1

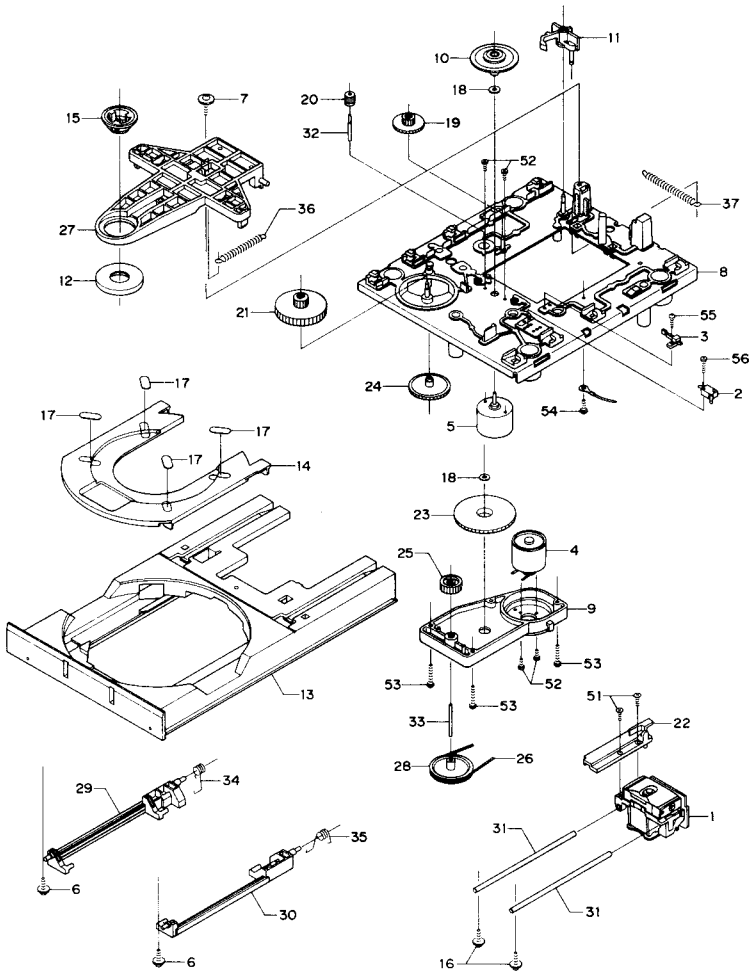

NOTES:

1. Parts order must contain Model Number, Part Number and Description.
2. Ordering quantity of screws and resistors must be multiple of 10 pcs.

IMPORTANT NOTE

The Compact Disc Player has been Factory-adjusted for operation on 220V AC. The voltage can be changed for operation on 110V AC by making the following changes on the Compact Disc Player inside.

1. Remove the AC plug from the wall outlet.
2. Remove the screws securing the cover.
3. Disconnect Gray lead from Power SW. P.C.Board Terminal No.4, and then connect it to Power SW. P.C.Board Terminal No.3.
4. Disconnect Orange lead from Power SW. P.C.Board Terminal No.3, and then connect it to Power SW. P.C.Board Terminal No.4.

The Compact Disc Player is now ready 110V operation. DO NOT attempt to operate the Compact Disc Player on 220V. Damage will result !

FUNCTIONAL BLOCK DIAGRAM

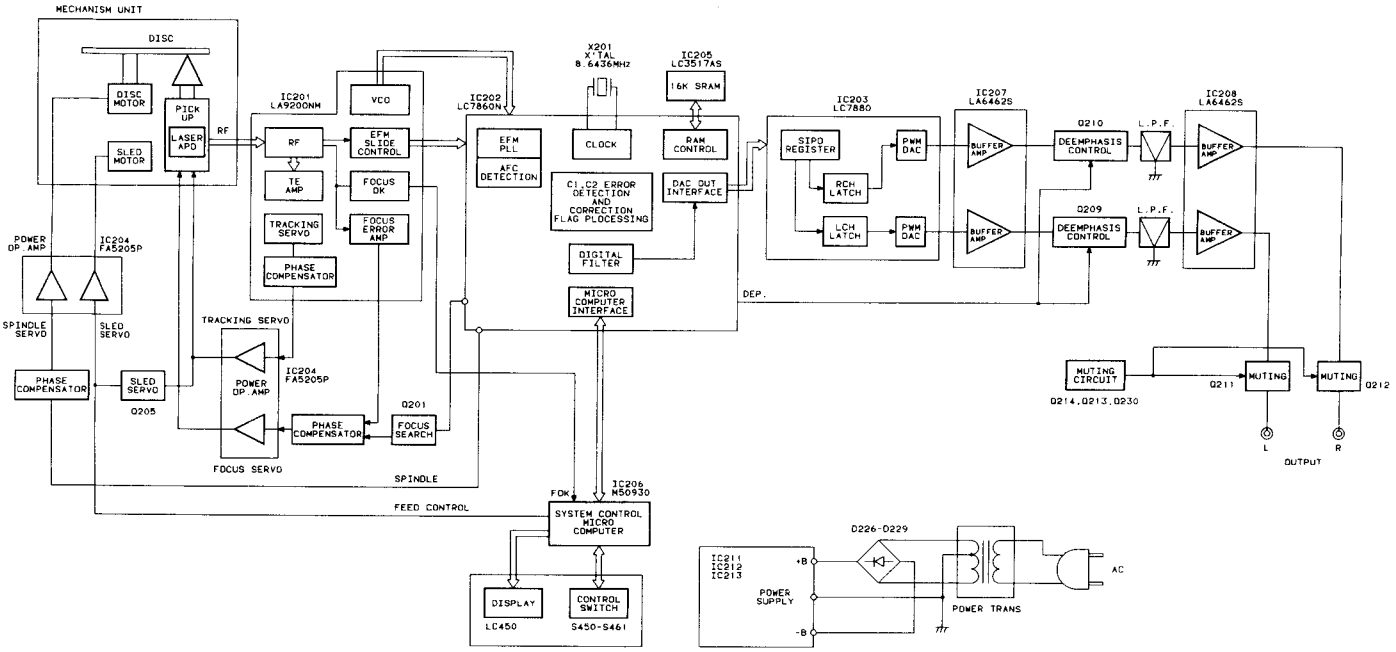

MAIN P.C.BOARD ALIGNMENT POINTS
(TOP VIEW)

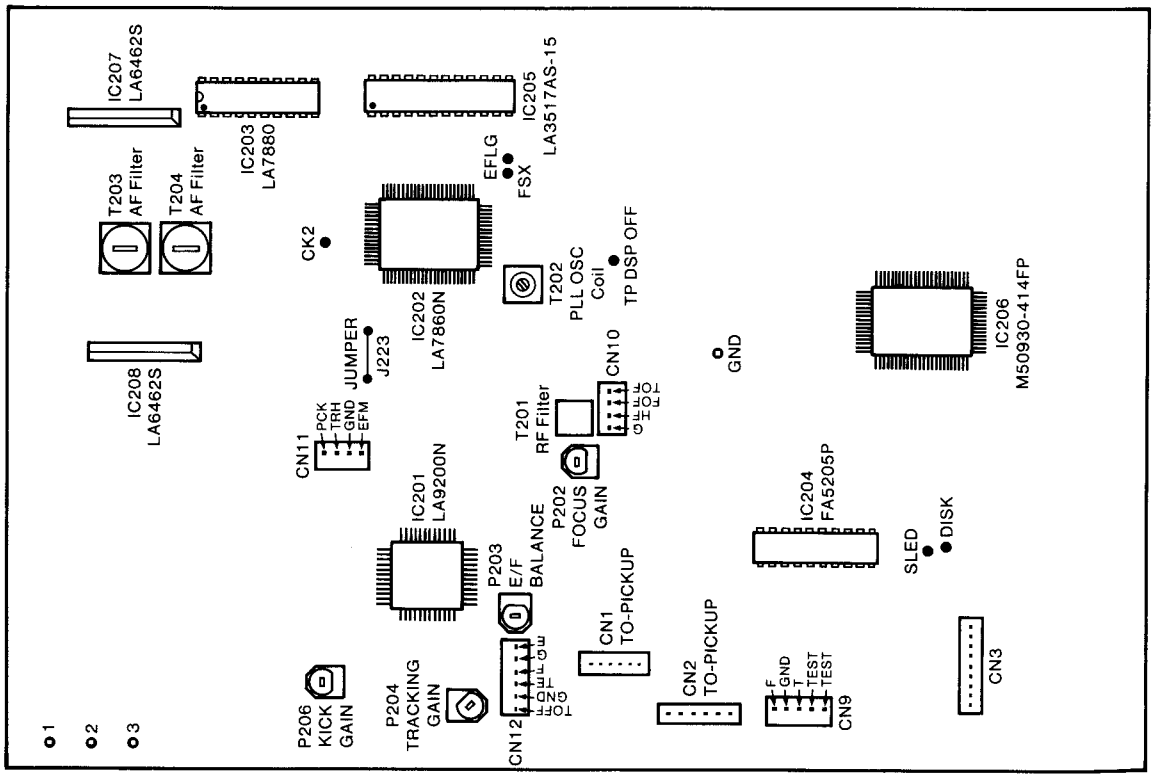

DISASSEMBLY PROCEDURES

REMOVING THE DISC TRAY

1. Apply Power Switch to the set and press the OPEN/CLOSE button to open the table load.
2. Apply OFF the Power Switch while the table load is open, and push the table load back in by hand to close it.

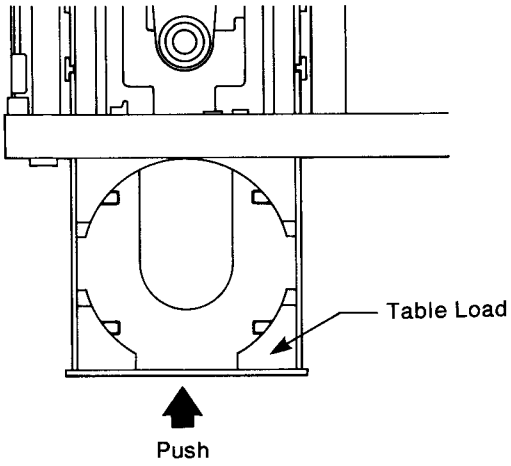

3. Pull out the table load by hand to open it again. The table load will disengage easily and come out smoothly.
4. Now remove the table load from the cabinet while pressing the tab in the direction of the arrow in the diagram below.

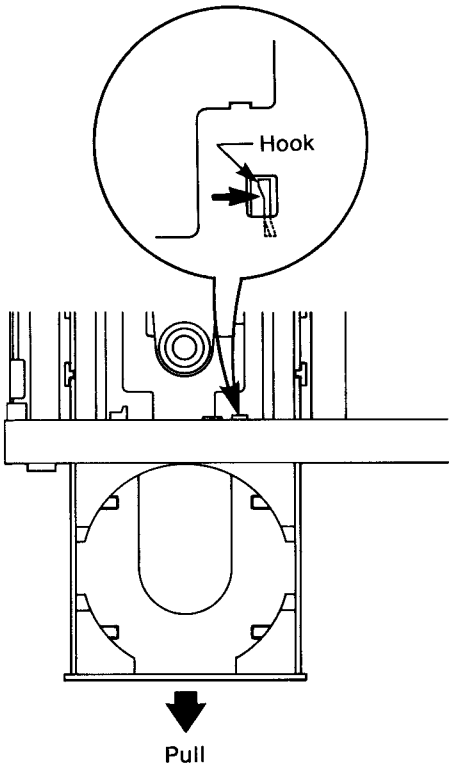

REMOVING THE MECHANISM

1. Take out the eighth screws with which the Cabinet Front is mounted in place and remove the Cabinet Front.
2. Take out the four screws (1 ~ 4 in the diagram below) with which the mechanism is mounted in place and remove the mechanism.

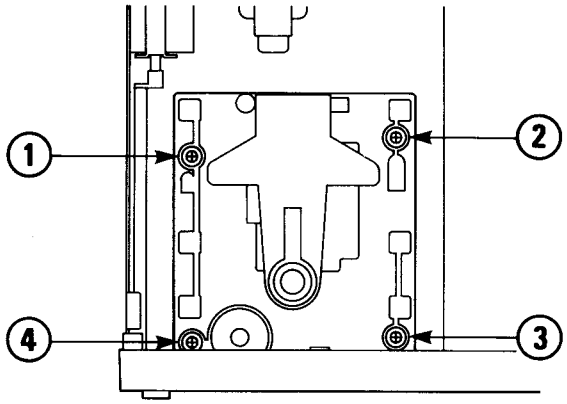

- The mechanism should be removed with the lead wires still attached, and then placed on a wooden or plastic sheet as shown below to adjust the diffraction grating.

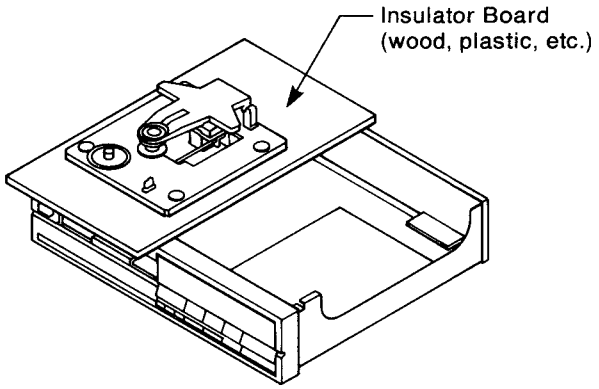

ADJUSTMENT PROCEDURES

BEFORE CHECKING OR ADJUSTING CD PLAYER

1. Procedures for all adjustments for the CD player from start to finish are described below.
2. The pick-up does not have to be adjusted if everything has been checked and no problems were found.

CHECKING FOCUS ERROR SIGNAL

The effectiveness of the pick-up is determined by checking its focus error signal. This must be checked before any repairs are performed on the CD player.

1. Apply Power Switch to the set and press the STOP button.
2. Cut Main P.C.Board jumper cable J223 and connect an oscilloscope between P202 left terminal and the **GND.** (Set the time at 0.5Sec/DIV.)
3. Press the OPEN/CLOSE button, place the test disc on the table load, and then press the OPEN/CLOSE button once again.
4. Once the disc is set, a waveform like that shown in the illustration below will be repeated three times. Check that the p-p voltage of this waveform is the same above and below the horizontal axis at 3V.

Repeated three times



(Measured with a Memory Scope)



* p-p voltage of 3V
* + and − voltage roughly same

5. Press the OPEN/CLOSE button repeatedly to pull out and insert the disc until the waveform appears each time the disc is inserted and removed.
6. If the results of the above procedure are not satisfactory, the pick-up is damaged.
7. After completing checks of the focus error signal solder the jumper line (J223) back in place.

FREE RUN FREQUENCY ADJUSTMENT

1. Connect the frequency counter to VCO test terminal (CN11-1) **PCK** test pin and to **GND.** (Use a 10:1 probe.)
2. Short the test point **TP DSP OFF** pin to **GND.**
3. Apply Power Switch to the set and press the STOP button.
4. Adjust the OSC coil T202 using a plastic screwdriver until the frequency counter indicator reads 4.3218MHz.

SETTING OF INITIAL POSITION OF VOLUME

1. Set the variable resistors to the initial positions listed below:

P202 (FOCUS GAIN)	Mechanical Center
P203 (E/F BALANCE)	Mechanical Center
P204 (TRACKING GAIN)	Mechanical Center
P206 (KICK GAIN)	Mechanical Center

FOCUS OFFSET CHECK

1. Apply Power Switch to the set and press the STOP button.
2. Connect a DC Voltmeter to the test terminal (CN9-5) **F** (focus coil) pin and short the focus test terminal (CN10-2) **FOF** pin to **GND.**
3. In this condition check that the DC Voltmeter indicator is in the range −0.7V ~ −1.2V.

DIFFRACTION GRID ADJUSTMENT

This set uses a three-beam laser pick-up system. Adjusting the diffraction grid means adjustment so that beams E and F are in position with respect to the main beam as shown in the diagram below on the bit streams.

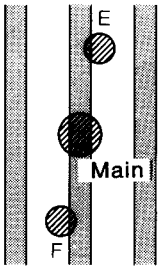

The adjustment procedure involves arranging the three beams in a straight line along the same bit stream and then adjusting them to specified positions.

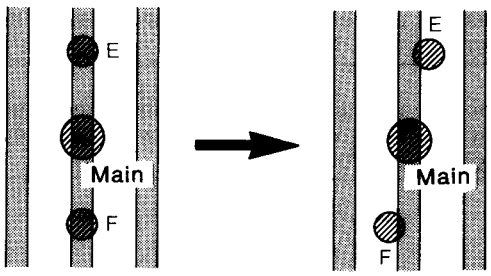

The adjustment steps are detailed below. These are very fine adjustments so great care should be exercised in this.

DIFFRACTION GRID ADJUSTMENT

1. Apply Power Switch to the set and press the STOP button.
2. Short tester terminal (CN9-1,2) microprocessor **TEST** pin to the **TEST** pin, and then short test terminal (CN12-1) **TOFF** pin to **GND** to turn the tracking servo OFF.
3. In this state, connect the **E**-beam output of test terminal (CN12-6) to Channel 1 of the oscilloscope and **F**-beam output of test terminal (CN12-4) to Channel 2, and now observe the lissajous waveform on the oscilloscope.

ADJUSTMENT PROCEDURES (Continued)

4. Place the test disc YEDS7 on the table load, and press the PLAY button.
5. When the disc begins to rotate a waveform will appear on the oscilloscope. While observing this waveform, turn the gears in the direction of the arrow by hand to send the pick-up to the outer edge.

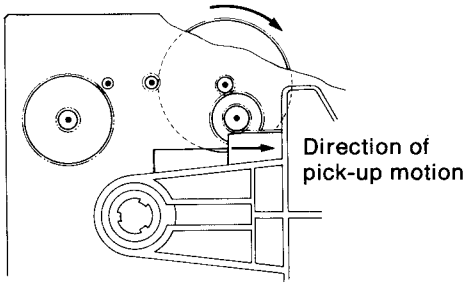

6. When the pick-up approaches the outer edge, the waveform on the oscilloscope will suddenly disappear, and if it is now pushed further outwards there will be points at which waveforms will appear again. These locations are the multiburst signal storage locations. If the disc rotates at high speed at this time, perform this step once again.

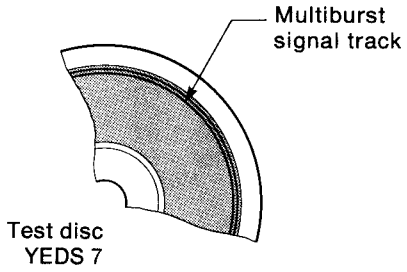

7. Set the oscilloscope to X-Y operation to bring up the waveforms. Insert the adjustment tool in the diffraction grating adjustment hole on the pick-up, and rotate the adjustment tool to right and left. The waveform should be almost a straight line with a phase difference of 0° as shown in Fig. 1 below. This indicates that the beams are arranged in one straight line. The waveform in Fig. 2 indicates that the beams are not arranged along the same stream.

NOTE:
It is important to turn the adjustment tool only a little at a time. If it is rotated too far, the beams will be pushed over into neighboring streams.

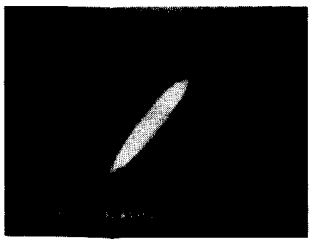

Fig. 1

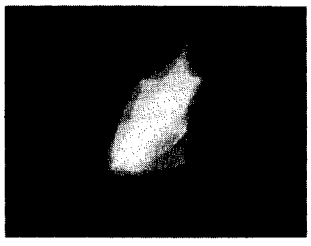

Fig. 2

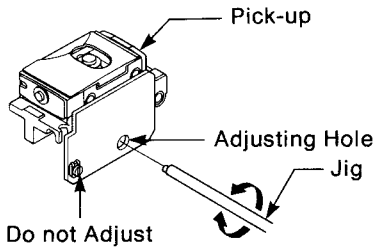

8. Next, when the waveform in Fig. 1 is obtained, turn the adjustment tool clockwise from that position at which the waveform in Fig. 1 appeared and adjust so that the waveform is a straight line with a phase difference of 180°. (See Fig. 3)

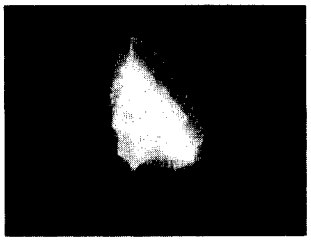

Fig. 3

9. Once the state indicated by the waveform in Fig. 3 is obtained, hold the STOP button down temporarily, and remove the connection between tester terminal (CN9-1,2) microprocessor **TEST** pin and the **TEST** pin as well as that between test terminal (CN12-1) **TOFF** pin and **GND.**
10. Next, press the PLAY button, and set the oscilloscope in the DUAL MODE so that both E and F outputs can be seen. Set the DISPLAY TIME to 5μs. Now, adjustment is complete if the waveforms shown below in Fig. 4 (Channel 1 trigger) are obtained.

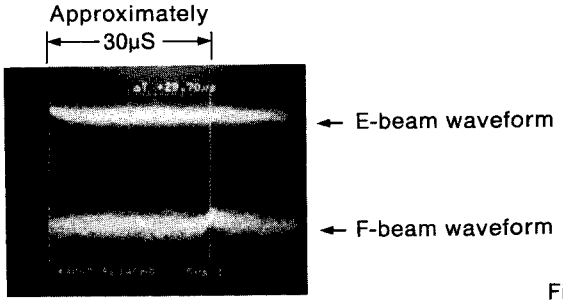

Fig. 4

NOTE:
Diffraction grating adjustment is performed for a single pick-up, so if the following checks are performed adjustment is unnecessary.

a. PLAY the fourth item on the test disc (Modern Wave Ⅱ CA35-1045, Toshiba-EMI), turn the tracking servo OFF, and check that the waveform is linear with a phase difference of 180°.
b. Next, apply tracking servo, and if the waveforms shown in Fig. 4 are obtained then adjustment is unnecessary.

E/F BALANCE ADJUSTMENT

1. Place the test disc (Modern Wave Ⅱ) on the table load, and play the fourth item on the disc. Short the test terminal (CN9-1,2) microprocessor **TEST** pin to the **TEST** pin,

and test terminal (CN12-1) **TOFF** pin to **GND** to turn tracking servo OFF.

2. Connect a DC Voltmeter and an oscilloscope via the low-pass filter like that shown in the illustration below to the test terminal (CN12-3) **TE** (tracking error) pin.

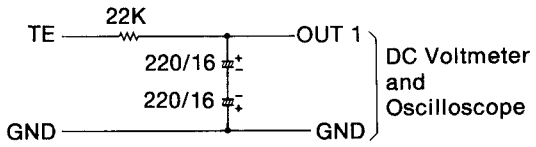

Measurement circuit

3. Adjust P203 so that the DC Voltmeter reading is minimum (oscilloscope waveform is symmetric to + and − about the zero level).

CONFIRMING JITTER

If no jitter counter is available, this check does not have to be have to be performed.

1. PLAY the fourth item on the test disc (Modern Wave Ⅱ).
2. Connect an oscilloscope to the test terminal (CN10-3) **HF** pin, and check that its level is in the range 2.0Vp-p ~ 3.3Vp-p.
3. Connect a jitter counter to test terminal (CN11-4) **EFM** pin, and check that the 3T jitter value is less than 20ns. (Window width: 600ns ~ 850ns, Set Level: 2.5V)
4. Now PLAY the tenth item on the test disc and check that the jitter value is less than 20ns again.

ADJUSTMENT OF TURNTABLE HEIGHT

This adjustment must be performed when the Spindle Motor is replaced.

1. The turntable should be mounted so that its upper surface is 14.05mm±0.1mm above the surface of the chassis.

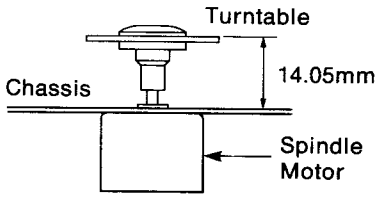

2. Place the test disc (Modern Wave Ⅱ) on the turntable.
3. Connect a DC Voltmeter and an oscilloscope via the low-pass filter shown below to test terminal (CN9-5) **F** (focus coil) pin.

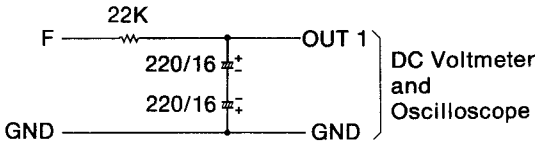

Measurement circuit

4. Apply Power Switch to the set and PLAY the first item on the disc.
5. If the DC Voltmeter reading is not in the ranges 0V±0.2V for inner tracks and 0V±0.35V for outer tracks, then the turntable height must be readjusted. Raise the turntable higher if the DC Voltmeter indicator is on the plus (+) side, and lower it if it is on the minus (−) side. (With this circuit 1V represents movement of approximately 0.55mm ~ 0.65mm.)

ADJUSTMENT OF FOCUS/TRACKING GAIN

The measurement circuit diagrammed below must be used in order to adjust focus gain and tracking gain correctly.

1. Use IC TA7256P or an equivalent product.
2. Short the interval between **IN** and **SG**, apply 1kHz, 1Vp-p from **SG**, and adjust variable resistor 2kΩ-B so that the **OUT** output is minimum.

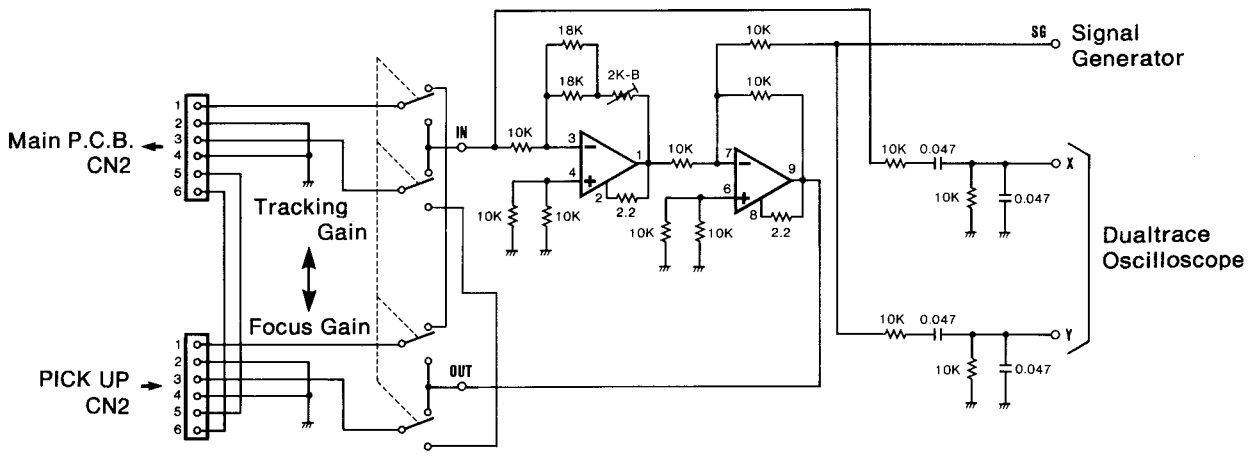

Measurement circuit

ADJUSTMENT PROCEDURES (Continued)

FOCUS GAIN ADJUSTMENT

1. Apply P202 to the center position, and place the test disc (Modern Wave Ⅱ) on the table load.
2. Connect the measurement tool described in the last section to focus coil pin (CN2).
3. Apply Power Switch to the set and PLAY the first item on the test disc. Now apply a signal of 900Hz and 0.3Vp-p from the signal generator to the measurement circuit.
4. Set the oscilloscope to X-Y operation, and while observing the lissajous waveform adjust P202 to the point where the phase difference is 90° as shown in Fig. 5 below.

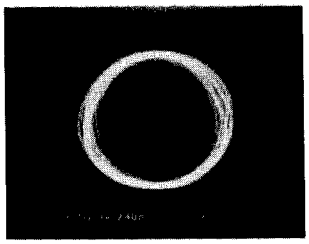

Fig. 5

TRACKING GAIN ADJUSTMENT

1. Apply P204 to the center position, and place the test disc (Modern Wave Ⅱ) on the table load.
2. Connect the measurement tool described in the last section to the tracking coil pin CN2.
3. Apply Power Switch to the set and PLAY the first item on the test disc. Now apply a signal of 1350Hz and 0.3Vp-p from the signal generator to the measurement circuit.
4. Set the oscilloscope to X-Y operation, and while observing the lissajous waveform adjust P204 to the point where the phase difference is 90° as shown in Fig. 5 above.

NOTE:
If these two adjustments are performed, the TRACKING OFFSET must also be adjusted.

KICK GAIN ADJUSTMENT

1. Place the test disc (Modern Wave Ⅱ) on the table load.
2. Set the oscilloscope to NORMAL TRIG., set the EXT. TRIG. pin to external trigger, and input the trigger from test terminal (CN11-2) **TRH** pin to the oscilloscope.
3. Next connect test terminal (CN10-3) **HF** pin to Channel 1 of the oscilloscope, and connect test terminal (CN12-3) **TE** pin to Channel 2.
4. Apply Power Switch to the set and PLAY the first item on the test disc, and the press the PAUSE button. Now observe the waveforms for **HF** and **TE** with triggers applied from test terminal (CN11) **TRH** pin. At this point, adjust P206 so that a kick pulse waveform of about 1.5 tracks as shown in Fig. 6 below is obtained.

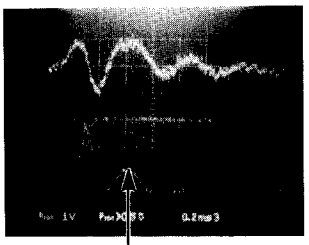

← Tracking Error Out

← HF waveform

Adjustment must be performed so curve section in Fig. 6 appears.

Fig. 6

ACCESS OPERATION CHECK

1. Vary the FREE RUN FREQUENCY from a center value of 4.3218MHz to ±50kHz (4.2700MHz ~ 4.3700MHz), and have the pick-up search from the track closest to the center to the outermost track and then back into the track nearest the center, to check that operation is stable.

NOTE:
After this adjustment is completed, be sure to adjust back to 4.3218MHz.

P.C.BOARD PARTS LIST

Ref. No.	Part No.	Description	Q'ty
MAIN P.C.B. ASSY			
31	620 191 2920	Main P.C.B. Assy	1
	620 017 2721	Fuse Clip	4
	620 021 6838	RT Pin 0.8 X7L	3
	620 031 4763	Wire Wrap Terminal	6
	620 053 0767	Cover Sever	2
	620 053 7247	Plate Heat Sink (for IC212)	1
	620 053 9562	Plate Heat Sink (for IC204)	1
⚠	423 003 7201	FUSE 250V T500mA	2
	411 020 7700	SCR S-TPG BRZ 3X6	1
CN1	620 021 8337	Plug 6P	1
CN2	620 021 8610	Plug 6P	1
CN3	620 021 9976	Plug 9P	1
CN9	620 021 5589	Plug 5P	1
CN10	620 021 4346	Plug 4P	1
CN11	620 021 4346	Plug 4P	1
CN12	620 021 3950	Plug 6P	1
P202	620 006 1940	Potentiometer (B-10kΩ)	1
P203	620 006 2343	Potentiometer (B-100kΩ)	1
P204	620 006 1957	Potentiometer (B-20kΩ)	1
P206	620 006 1933	Potentiometer (B-100kΩ)	1
PC201	620 018 0559	Socket 11P	1
PC202	620 018 0573	Socket 14P	1
PC203	620 018 0566	Socket 12P	1
PC204	620 017 5043	Socket 7P	1
T202	620 028 8699	OSC Coil	1
or	620 028 8774	OSC Coil	1
T203	620 026 4662	Filter	1
or	620 026 4679	AF Filter	1
T204	620 026 4662	Filter	1
or	620 026 4679	AF Filter	1
X201	620 007 2939	Crystal	1
or	620 007 3172	Crystal	1
X202	620 007 3400	Ceramic OSC 4.32MHz	1
or	620 007 3394	Ceramic OSC 4.19MHz	1
IC201	409 124 6507	IC LA9200NM	1
IC202	409 168 1308	IC LC7860J	1
IC203	409 067 0709	IC LC7880	1
IC204	409 136 9206	IC FA5205P	1
IC205	409 123 7109	IC LC3517BS-15	1
IC206	409 168 1506	IC M50930-123FP	1
IC207	409 018 5104	IC LA6458SS	1
or	409 018 5401	IC LA6462S	1
IC208	409 057 4601	IC UPC4570HA	1
or	409 018 5104	IC LA6458SS	1
IC211	409 050 0501	IC TA78L006AP	1
IC212	409 039 9907	IC NJM78M05A	1
or	409 026 8500	IC L78M05	1
IC213	409 136 9503	IC TA79L006P	1
Q201	405 019 3804	TR 2SC536-G-NP-AA	1
Q204	405 018 2600	TR 2SC3400	1
Q205	405 021 0600	TR 2SD1012-G-SPA	1
Q206	405 018 2600	TR 2SC3400	1
Q207	405 018 2600	TR 2SC3400	1
Q208	405 018 2600	TR 2SC3400	1
Q209	405 021 0600	TR 2SD1012-G-SPA	1
Q210	405 021 0600	TR 2SD1012-G-SPA	1
Q211	405 021 0600	TR 2SD1012-G-SPA	1
Q212	405 021 0600	TR 2SD1012-G-SPA	1
Q213	405 019 3804	TR 2SC536-G-NP	1
Q214	405 004 4502	TR 2SA608-F-NP	1
Q215	405 004 4502	TR 2SA608-F-NP	1
Q216	405 004 4502	TR 2SA608-F-NP	1
Q220	405 037 0205	TR 2SC3860	1
Q221	405 037 0205	TR 2SC3860	1
Q222	405 034 8501	TR DTA144-TF	1
Q223	405 034 8501	TR DTA144-TF	1
Q224	405 034 8501	TR DTA144-TF	1
Q225	405 034 8501	TR DTA144-TF	1
Q226	405 034 8501	TR DTA144-TF	1
Q227	405 034 8501	TR DTA144-TF	1
Q228	405 034 8501	TR DTA144-TF	1
Q230	405 018 2600	TR 2SC3400	1
D201	407 000 3503	VARACTOR DI SVC211SP	1
D202	407 007 9904	DIODE GMA01-BT	1
D203	407 005 3805	DIODE DS442-BT	1
D205	407 005 3805	DIODE DS442-BT	1
D207	407 007 9904	DIODE GMA01-BT	1
D208	407 007 9904	DIODE GMA01-BT	1
D209	407 007 9904	DIODE GMA01-BT	1
D210	407 007 9904	DIODE GMA01-BT	1
D211	407 007 9904	DIODE GMA01-BT	1
D212	407 007 9904	DIODE GMA01-BT	1
D213	407 007 9904	DIODE GMA01-BT	1
D214	407 005 3805	DIODE DS442-BT	1
D216	407 005 3805	DIODE DS442-BT	1
D217	407 005 3805	DIODE DS442-BT	1
D225	407 007 9904	DIODE GMA01-BT	1
D226	407 005 8602	DIODE ERA15-02	1
D227	407 005 8602	DIODE ERA15-02	1
D228	407 005 8602	DIODE ERA15-02	1
D229	407 005 8602	DIODE ERA15-02	1
D230	407 050 6806	ZENER DIODE GZA7.5X	1
D231	407 007 9904	DIODE GMA01-BT	1
D232	407 007 9904	DIODE GMA01-BT	1
D233	407 007 9904	DIODE GMA01-BT	1
C201	403 030 6309	CERAMIC 68P J 50V	1
C202	403 030 6309	CERAMIC 68P J 50V	1
C203	403 071 2001	CERAMIC 180P K 50V	1
C204	403 048 7602	ELECT 0.47U M 50V	1
C205	403 086 1907	NP-ELECT 0.47U M 50V	1
C206	403 073 7004	CERAMIC 470P K 50V	1
C207	403 063 2606	POLYESTER 0.068U K 50V	1
C208	403 067 5603	MT-COMPO 0.1U J 50V	1
C209	403 073 7004	CERAMIC 470P K 50V	1
C210	404 028 9302	CERAMIC 0.1U Z 50V	1
C211	403 022 7703	CERAMIC 33P J 50V	1
C212	403 022 7703	CERAMIC 33P J 50V	1
C214	403 057 0908	POLYESTER 0.01U K 50V	1
C215	403 056 8608	POLYESTER 1000P K 50V	1
C216	403 067 6204	MT-COMPO 0.15U J 50V	1
C217	403 067 6709	MT-COMPO 0.22U J 50V	1
C218	403 067 7300	MT-COMPO 0.33U J 50V	1
C219	403 025 7304	CERAMIC 4.7P K 50V	1
C220	404 028 9302	CERAMIC 0.1U Z 50V	1
C221	403 071 6207	CERAMIC 220P K 50V	1
C222	403 057 8003	POLYESTER 0.012U K 50V	1
C223	403 057 8003	POLYESTER 0.012U K 50V	1
C224	403 059 4102	POLYESTER 2200P K 50V	1
C225	403 059 4102	POLYESTER 2200P K 50V	1
C226	403 086 2706	NP-ELECT 1U M 50V	1
C228	403 042 0302	ELECT 10U M 16V	1
C229	403 038 2303	ELECT 100U M 6.3V	1
C230	403 001 1906	CERAMIC 0.01U M 16V	1
C231	403 086 2706	NP-ELECT 1U M 50V	1
C232	403 071 6207	CERAMIC 220P K 50V	1
C233	403 067 7409	MT-COMPO 0.039U J 50V	1
C234	403 087 2507	STYRENE 1000P J 50V	1
C235	403 001 1906	CERAMIC 0.01U M 16V	1
C236	404 028 9302	CERAMIC 0.1U Z 50V	1
C237	403 057 0908	POLYESTER 0.01U K 50V	1
C238	403 149 7105	POLYPRO 680P J 100V	1
or	403 088 7105	STYRENE 680P J 50V	1
C239	403 067 7201	MT-COMPO 0.033U J 50V	1
C240	403 067 5603	MT-COMPO 0.1U J 50V	1
C241	403 021 7308	CERAMIC 3.3P K 50V	1
C242	403 021 7308	CERAMIC 3.3P K 50V	1
C243	403 067 7409	MT-COMPO 0.039U J 50V	1
C244	403 067 7409	MT-COMPO 0.039U J 50V	1
C245	403 047 1502	ELECT 4.7U M 25V	1
C246	403 047 1502	ELECT 4.7U M 25V	1
C247	403 021 7308	CERAMIC 3.3P K 50V	1
C248	403 021 7308	CERAMIC 3.3P K 50V	1
C249	403 085 6408	NP-ELECT 4.7U M 16V	1
C250	403 085 6408	NP-ELECT 4.7U M 16V	1
C251	403 073 7004	CERAMIC 470P K 50V	1
C252	403 073 7004	CERAMIC 470P K 50V	1
C253	403 069 1207	CERAMIC 1000P K 50V	1
C254	403 069 1207	CERAMIC 1000P K 50V	1
C255	403 019 9703	CERAMIC 27P J 50V	1
C256	403 019 9703	CERAMIC 27P J 50V	1
C259	403 049 1609	ELECT 1U M 50V	1
C260	403 047 9607	ELECT 0.1U M 50V	1
C261	404 028 9302	CERAMIC 0.1U Z 50V	1
C262	403 047 1502	ELECT 4.7U M 25V	1
C263	403 038 2303	ELECT 100U M 6.3V	1
C264	403 069 8404	CERAMIC 0.01U Z 50V	1
C265	403 069 8404	CERAMIC 0.01U Z 50V	1

P.C.BOARD PARTS LIST (Continued)

Ref. No.	Part No.	Description				Q'ty
C266	403 069 8404	CERAMIC	0.01U	Z	50V	1
C267	403 069 8404	CERAMIC	0.01U	Z	50V	1
C268	403 043 3104	ELECT	2200U	M	16V	1
C269	403 043 3104	ELECT	2200U	M	16V	1
C270	403 039 2906	ELECT	47U	M	6.3V	1
C271	403 039 2906	ELECT	47U	M	6.3V	1
C272	403 039 2906	ELECT	47U	M	6.3V	1
C273	403 042 0302	ELECT	10U	M	16V	1
C274	403 040 2704	ELECT	22U	M	10V	1
C275	403 001 1906	CERAMIC	0.01U	M	16V	1
C276	403 038 7209	ELECT	220U	M	6.3V	1
C277	403 042 0302	ELECT	10U	M	16V	1
C278	403 039 2906	ELECT	47U	M	6.3V	1
C280	404 028 9302	CERAMIC	0.1U	Z	50V	1
C281	403 038 7209	ELECT	220U	M	6.3V	1
C283	403 050 1209	ELECT	2.2U	M	50V	1
C284	403 050 1209	ELECT	2.2U	M	50V	1
C287	403 039 2906	ELECT	47U	M	6.3V	1
C288	403 042 0302	ELECT	10U	M	16V	1
C289	403 042 0302	ELECT	10U	M	16V	1
C290	403 001 1906	CERAMIC	0.01U	M	16V	1
C294	403 039 2906	ELECT	47U	M	6.3V	1
C298	403 069 1207	CERAMIC	1000P	K	50V	1
C310	403 001 1906	CERAMIC	0.01U	M	16V	1
C311	404 028 9302	CERAMIC	0.1U	Z	50V	1
C312	404 028 9302	CERAMIC	0.1U	Z	50V	1
C314	403 042 0302	ELECT	10U	M	16V	1
C315	403 042 0302	ELECT	10U	M	16V	1
C316	403 042 0302	ELECT	10U	M	16V	1
C317	403 001 5805	CERAMIC	0.022U	N	16V	1
C319	403 069 1207	CERAMIC	1000P	K	50V	1
C320	404 028 9302	CERAMIC	0.1U	Z	50V	1
C321	403 015 1602	CERAMIC	2P	C	50V	1
C322	403 008 5204	CERAMIC	10P	D	50V	1
C325	403 086 2706	NP-ELECT	1U	M	50V	1
C327	403 072 2703	CERAMIC	0.022U	Z	50V	1
C347	403 069 1207	CERAMIC	1000P	K	50V	1
R201	401 024 7707	CARBON	100K	JA	1/6W	1
R202	401 025 1902	CARBON	15K	JA	1/6W	1
R203	401 027 2600	CARBON	5.6K	JA	1/6W	1
R204	401 024 7707	CARBON	100K	JA	1/6W	1
R206	401 027 2600	CARBON	5.6K	JA	1/6W	1
R208	401 025 8208	CARBON	22K	JA	1/6W	1
R209	401 024 7707	CARBON	100K	JA	1/6W	1
R210	401 025 8208	CARBON	22K	JA	1/6W	1
R211	401 024 9305	CARBON	1.2K	JA	1/6W	1
R212	401 027 0309	CARBON	47K	JA	1/6W	1
R213	401 026 1604	CARBON	270K	JA	1/6W	1
R214	401 024 6403	CARBON	10	JA	1/6W	1
R215	401 025 5405	CARBON	2.2	JA	1/6W	1
R216	401 025 2305	CARBON	150K	JA	1/6W	1
R218	401 024 7707	CARBON	100K	JA	1/6W	1
R219	401 025 7805	CARBON	2.2K	JA	1/6W	1
R220	401 026 0607	CARBON	270	JA	1/6W	1
R221	401 024 9701	CARBON	12K	JA	1/6W	1
R222	401 026 7408	CARBON	39K	JA	1/6W	1
R223	401 019 3004	CARBON	39K	JA	1/4W	1
R224	401 025 1902	CARBON	15K	JA	1/6W	1
R225	401 026 1307	CARBON	27K	JA	1/6W	1
R226	401 025 8703	CARBON	220K	JA	1/6W	1
R227	401 026 1307	CARBON	27K	JA	1/6W	1
R228	401 026 4902	CARBON	330K	JA	1/6W	1
R229	401 024 6403	CARBON	10	JA	1/6W	1
R232	401 025 7805	CARBON	2.2K	JA	1/6W	1
R235	401 024 7400	CARBON	10K	JA	1/6W	1
R236	401 024 7707	CARBON	100K	JA	1/6W	1
R237	401 024 7707	CARBON	100K	JA	1/6W	1
R238	401 025 8208	CARBON	22K	JA	1/6W	1
R239	401 025 8208	CARBON	22K	JA	1/6W	1
R240	401 026 4308	CARBON	3.3K	JA	1/6W	1
R241	401 026 9907	CARBON	4.7K	JA	1/6W	1
R242	401 025 7409	CARBON	220	JA	1/6W	1
R243	401 025 8208	CARBON	22K	JA	1/6W	1
R244	401 024 7004	CARBON	1K	JA	1/6W	1
R245	401 025 1902	CARBON	15K	JA	1/6W	1
R246	401 025 7805	CARBON	2.2K	JA	1/6W	1
R247	401 012 8105	CARBON	100K	JA	1/4W	1
R248	401 012 8105	CARBON	100K	JA	1/4W	1
R249	401 027 3201	CARBON	560K	JA	1/6W	1
R250	401 027 3201	CARBON	560K	JA	1/6W	1
R251	401 027 3003	CARBON	56K	JA	1/6W	1
R252	401 027 0309	CARBON	47K	JA	1/6W	1
R253	401 027 5205	CARBON	680	JA	1/6W	1
R254	401 024 7400	CARBON	10K	JA	1/6W	1
R255	401 025 5405	CARBON	2.2	JA	1/6W	1
R257	401 025 5405	CARBON	2.2	JA	1/6W	1
R258	401 025 4903	CARBON	180K	JA	1/6W	1
R259	401 024 7400	CARBON	10K	JA	1/6W	1
R260	401 025 5405	CARBON	2.2	JA	1/6W	1
R261	401 024 7400	CARBON	10K	JA	1/6W	1
R262	401 025 7805	CARBON	2.2K	JA	1/6W	1
R263	401 027 5502	CARBON	6.8K	JA	1/6W	1
R264	401 016 4806	CARBON	22K	JA	1/4W	1
R265	401 024 7400	CARBON	10K	JA	1/6W	1
R266	401 014 6109	CARBON	150K	JA	1/4W	1
R267	401 014 6109	CARBON	150K	JA	1/4W	1
R268	401 026 4605	CARBON	33K	JA	1/6W	1
R269	401 026 4605	CARBON	33K	JA	1/6W	1
R270	401 016 3809	CARBON	2.2K	JA	1/4W	1
R271	401 020 2003	CARBON	4.7K	JA	1/4W	1
R272	401 023 2802	CARBON	8.2K	JA	1/4W	1
R273	401 019 3004	CARBON	39K	JA	1/4W	1
R274	401 027 5205	CARBON	680	JA	1/6W	1
R275	401 027 5205	CARBON	680	JA	1/6W	1
R276	401 025 1308	CARBON	150	JA	1/6W	1
R277	401 024 7400	CARBON	10K	JA	1/6W	1
R278	401 024 7400	CARBON	10K	JA	1/6W	1
R279	401 024 9305	CARBON	1.2K	JA	1/6W	1
R280	401 024 9305	CARBON	1.2K	JA	1/6W	1
R281	401 025 8703	CARBON	220K	JA	1/6W	1
R282	401 025 8703	CARBON	220K	JA	1/6W	1
R283	401 026 6609	CARBON	390	JA	1/6W	1
R284	401 026 6609	CARBON	390	JA	1/6W	1
R285	401 026 4308	CARBON	3.3K	JA	1/6W	1
R286	401 026 4308	CARBON	3.3K	JA	1/6W	1
R287	401 024 7004	CARBON	1K	JA	1/6W	1
R288	401 024 7004	CARBON	1K	JA	1/6W	1
R289	401 027 0309	CARBON	47K	JA	1/6W	1
R290	401 027 0309	CARBON	47K	JA	1/6W	1
R291	401 027 0309	CARBON	47K	JA	1/6W	1
R292	401 027 0309	CARBON	47K	JA	1/6W	1
R293	401 025 4606	CARBON	18K	JA	1/6W	1
R294	401 025 4606	CARBON	18K	JA	1/6W	1
R295	401 024 7707	CARBON	100K	JA	1/6W	1
R296	401 024 7707	CARBON	100K	JA	1/6W	1
R297	401 025 7805	CARBON	2.2K	JA	1/6W	1
R298	401 025 7805	CARBON	2.2K	JA	1/6W	1
R299	401 027 5502	CARBON	6.8K	JA	1/6W	1
R300	401 027 5502	CARBON	6.8K	JA	1/6W	1
R301	401 024 7400	CARBON	10K	JA	1/6W	1
R302	401 024 7400	CARBON	10K	JA	1/6W	1
R303	401 025 1902	CARBON	15K	JA	1/6W	1
R304	402 039 2800	FUSIBLE RES	10	JA	1/4W	1
R305	402 016 4506	FUSIBLE RES	10	J-	1/2W	1
R306	402 039 2800	FUSIBLE RES	10	JA	1/4W	1
R307	402 016 4506	FUSIBLE RES	10	J-	1/2W	1
R308	402 016 4506	FUSIBLE RES	10	J-	1/2W	1
R309	401 016 1508	CARBON	22	JA	1/4W	1
R310	401 024 6700	CARBON	100	JA	1/6W	1
R311	401 016 1508	CARBON	22	JA	1/4W	1
R312	401 024 7707	CARBON	100K	JA	1/6W	1
R313	401 027 0309	CARBON	47K	JA	1/6W	1
R314	401 025 7409	CARBON	220	JA	1/6W	1
R315	401 025 8208	CARBON	22K	JA	1/6W	1
R316	401 024 7400	CARBON	10K	JA	1/6W	1
R317	401 024 7004	CARBON	1K	JA	1/6W	1
R318	401 027 0309	CARBON	47K	JA	1/6W	1
R319	401 026 4308	CARBON	3.3K	JA	1/6W	1
R320	401 024 7400	CARBON	10K	JA	1/6W	1
R321	401 026 1000	CARBON	2.7K	JA	1/6W	1
R322	401 026 9907	CARBON	4.7K	JA	1/6W	1
R323	401 026 9907	CARBON	4.7K	JA	1/6W	1
R324	401 026 9907	CARBON	4.7K	JA	1/6W	1
R325	401 024 8001	CARBON	1M	JA	1/6W	1
R326	401 025 8208	CARBON	22K	JA	1/6W	1
R327	401 024 7400	CARBON	10K	JA	1/6W	1
R328	401 027 0309	CARBON	47K	JA	1/6W	1
R329	401 025 7805	CARBON	2.2K	JA	1/6W	1

P.C.BOARD PARTS LIST (Continued)

Ref. No.	Part No.	Description	Q'ty
R330	401 018 4903	CARBON 33K JA 1/4W	1
R331	401 012 4503	CARBON 100 JA 1/4W	1
R332	401 015 3800	CARBON 18K JA 1/4W	1
R333	401 013 7305	CARBON 120K JA 1/4W	1
R334	401 020 2904	CARBON 47K JA 1/4W	1
R335	401 026 1604	CARBON 270K JA 1/6W	1
R336	401 026 1604	CARBON 270K JA 1/6W	1
R340	401 024 7400	CARBON 10K JA 1/6W	1
R341	401 016 4806	CARBON 22K JA 1/4W	1
R342	401 097 3705	OXIDE-MT 4.7 JB 1/2W	1
R343	401 024 7004	CARBON 1K JA 1/6W	1
R344	401 026 9600	CARBON 470 JA 1/6W	1
R345	401 016 3809	CARBON 2.2K JA 1/4W	1
R346	401 025 1605	CARBON 1.5K JA 1/6W	1
R347	401 024 7400	CARBON 10K JA 1/6W	1
R348	401 025 8208	CARBON 22K JA 1/6W	1
R349	401 024 7400	CARBON 10K JA 1/6W	1
R351	401 024 7400	CARBON 10K JA 1/6W	1
R352	401 024 7400	CARBON 10K JA 1/6W	1
R353	401 024 8001	CARBON 1M JA 1/6W	1
RB201	620 004 5209	Resistor 10K-4 J	1
RB202	620 004 5667	Resistor 47K-6	1
RB203	620 004 5650	Resistor 47K-4	1
POWER SWITCH P.C.B. ASSY			
32	620 191 2913	Power Switch P.C.B. Assy	1
	620 022 2587	EC Terminal 1P	2
	620 031 4763	Wire Wrap Terminal	3
S901⚠	620 015 2358	Power Switch	1
C901⚠	620 006 6679	Capacitor 0.01MF400V	1
LAMP P.C.B. ASSY			
33	620 191 2777	Lamp P.C.B. Assy	1
	620 030 8144	Lamp	2
	620 052 0171	Spacer	2
WCN4	620 055 3179	Jumper	1

Ref. No.	Part No.	Description	Q'ty
REAR P.C.B. ASSY			
34	620 191 4603	Rear P.C.B. Assy	1
CN501	620 022 0798	Plug 10P (Remote Control)	1
CN502	620 017 2356	Pin Jack 2P (Out put)	1
C501	403 069 1207	CERAMIC 1000P K 50V	1
C502	403 069 1207	CERAMIC 1000P K 50V	1
C503	403 069 1207	CERAMIC 1000P K 50V	1
C504	403 069 1207	CERAMIC 1000P K 50V	1
C505	403 069 1207	CERAMIC 1000P K 50V	1
C506	403 069 1207	CERAMIC 1000P K 50V	1
C507	403 069 1207	CERAMIC 1000P K 50V	1
C508	403 069 1207	CERAMIC 1000P K 50V	1
C509	403 069 1207	CERAMIC 1000P K 50V	1
C510	404 028 9302	CERAMIC 0.1U Z 50V	1
CONTROL P.C.B. ASSY			
35	620 191 2784	Control P.C.B. Assy	1
	620 016 7802	Tact Switch	11
	620 052 0102	Spacer A	1
	620 052 0119	Spacer B	1
CN450	620 022 1719	Plug 11P	1
CN451	620 022 1733	Plug 14P	1
CN452	620 022 1726	Plug 12P	1
CN453	620 022 0804	Plug 7P	1
LC450	620 030 9547	LCD, FTD6793	1
Q451	405 021 0600	TR 2SD1012-G-SPA	1
D451	407 028 8009	LED SLP-171E-01 (Remote Control)	1
R450	401 024 7400	CARBON 10K JA 1/6W	1
R451	401 027 0309	CARBON 47K JA 1/6W	1
R452	401 027 5007	CARBON 68 JA 1/6W	1

NOTES:

1. Parts order must contain Model Number, Part Number and Description.
2. Ordering quantity of screws and resistors must be multiple of 10 pcs.

IC BLOCK DIAGRAM

M50930-123FP BLOCK DIAGRAM

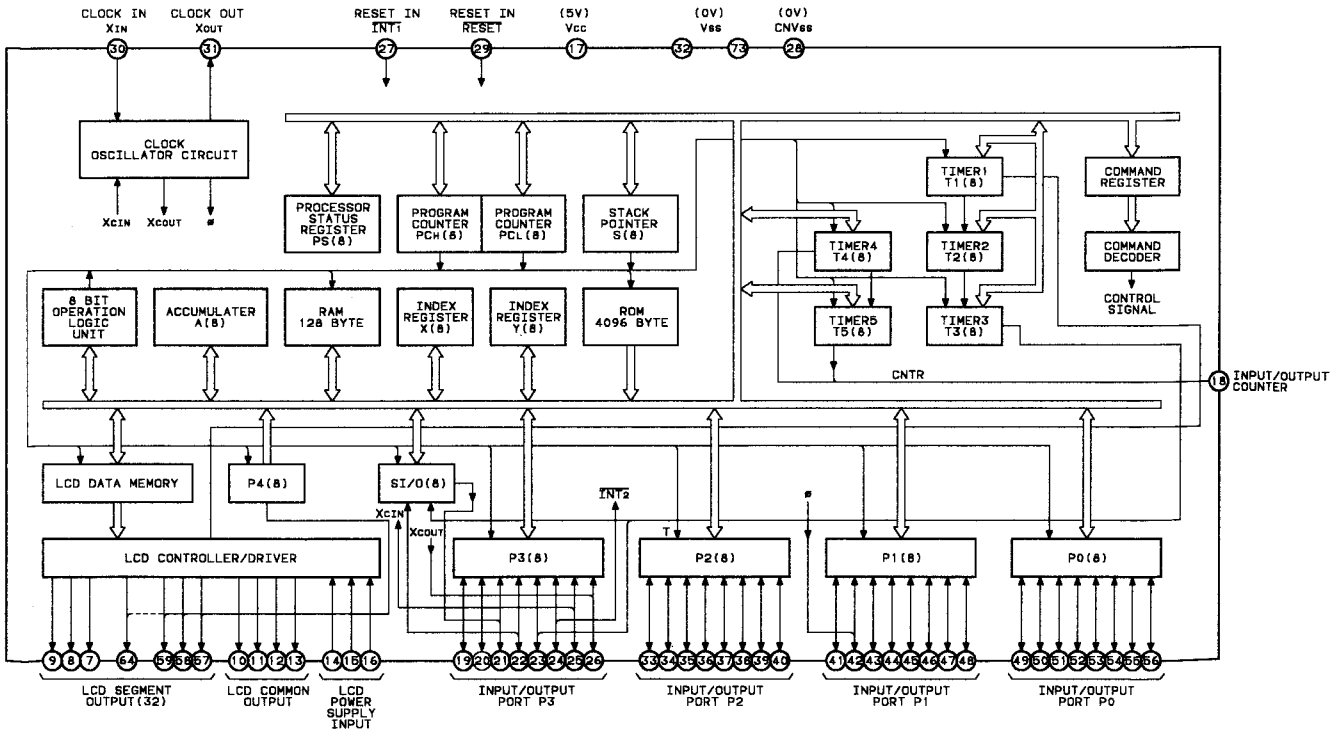

IC BLOCK DIAGRAM (Continued)

LA6458SS BLOCK DIAGRAM

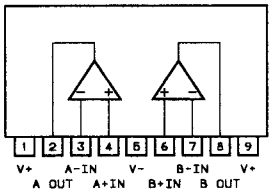

FA5205P BLOCK DIAGRAM

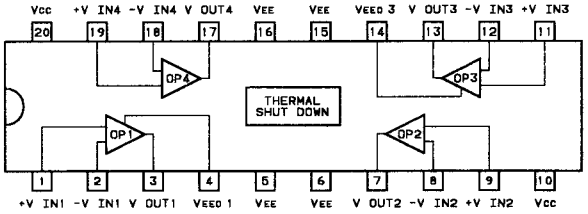
Vcc +V IN4 -V IN4 V OUT4 VEE VEE VEE 3 V OUT3 -V IN3 +V IN3
20 19 18 17 16 15 14 13 12 11
OP4
OP3
THERMAL SHUT DOWN
OP1
OP2
1 2 3 4 5 6 7 8 9 10
+V IN1 -V IN1 V OUT1 VEE 1 VEE VEE V OUT2 -V IN2 +V IN2 Vcc

LA9200NM BLOCK DIAGRAM

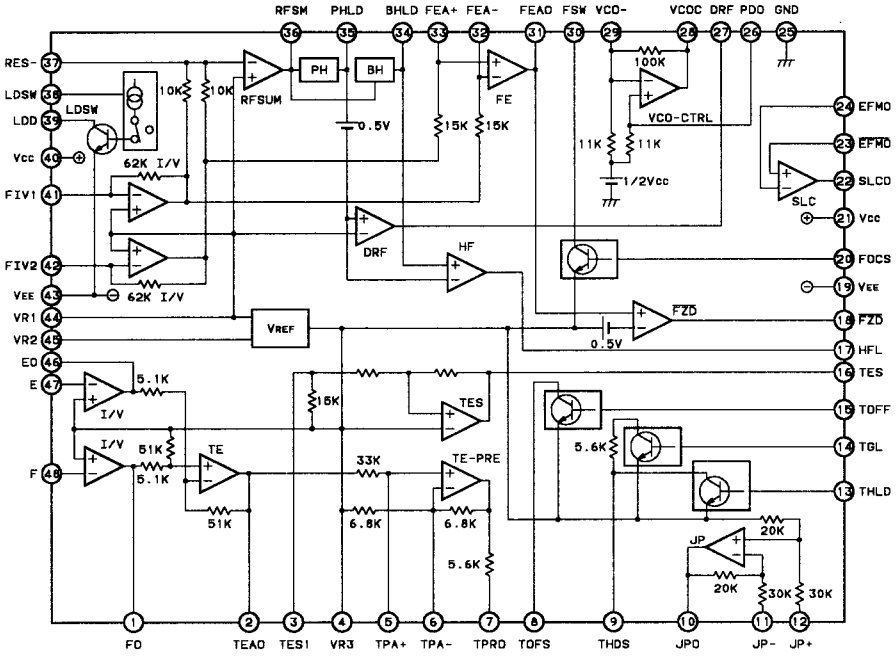
RFSM PHLD BHLD FEA+ FEA- FEAO FSW VCO- VCOC DRF PDO GND
RES- LDSW LDD Vcc FIV1 FIV2 VEE VR1 VR2 EO E F
10K 10K RFSUM PH BH 0.5V
LDSW 62K I/V 62K I/V
15K 15K FE
100K VCO-CTRL 11K 11K 1/2Vcc
DRF HF
VREF
FZD 0.5V
SLC
EFMO EFMO SLCO Vcc FOCS VEE FZD HFL TES TOFF TGL THLD
5.1K I/V 51K I/V 5.1K TE 51K
15K TES
33K TE-PRE 6.8K 6.8K 5.6K
5.6K
JP 20K 20K 30K 30K
FO TEAO TES1 VR3 TPA+ TPA- TPRO TOFS THDS JPO JP- JP+

TA78L006AP BLOCK DIAGRAM

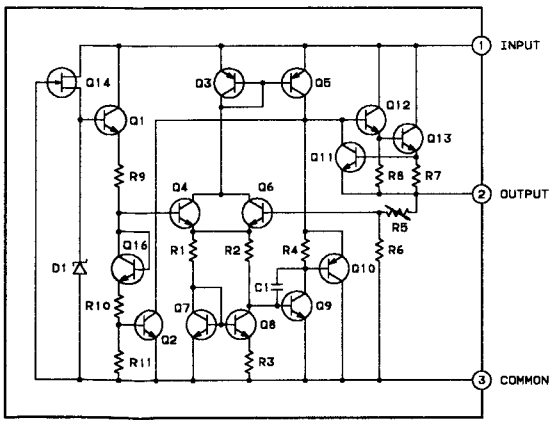

NJM78M05A BLOCK DIAGRAM

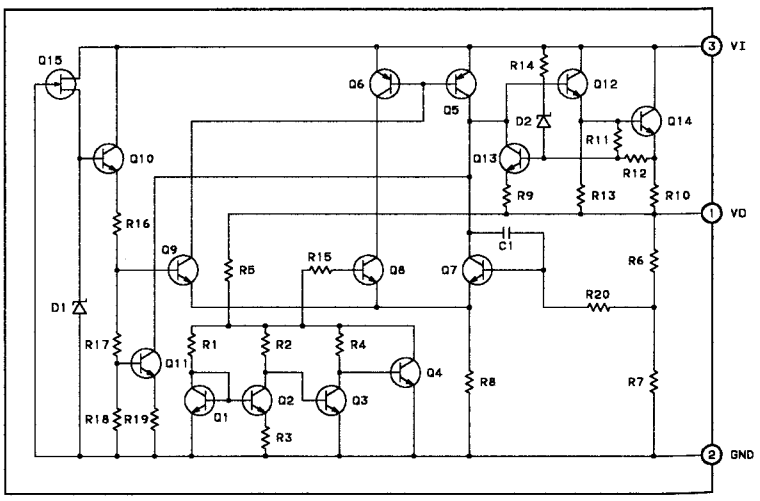

IC BLOCK DIAGRAM (Continued)

LC3517BS-15 BLOCK DIAGRAM

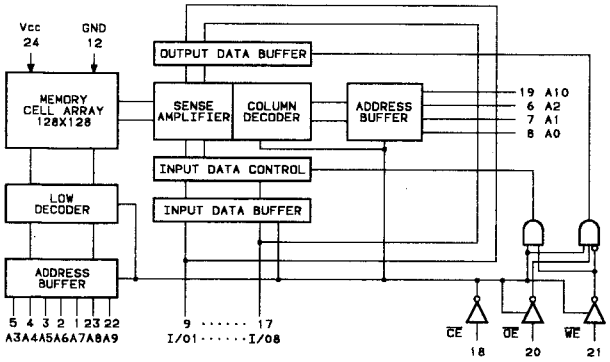

LC7880 BLOCK DIAGRAM

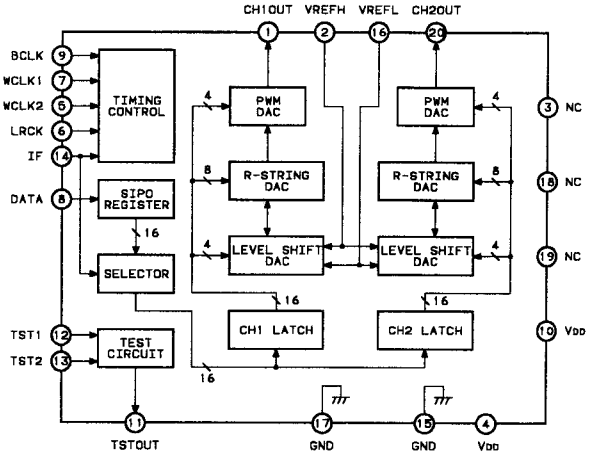

LC7860J BLOCK DIAGRAM

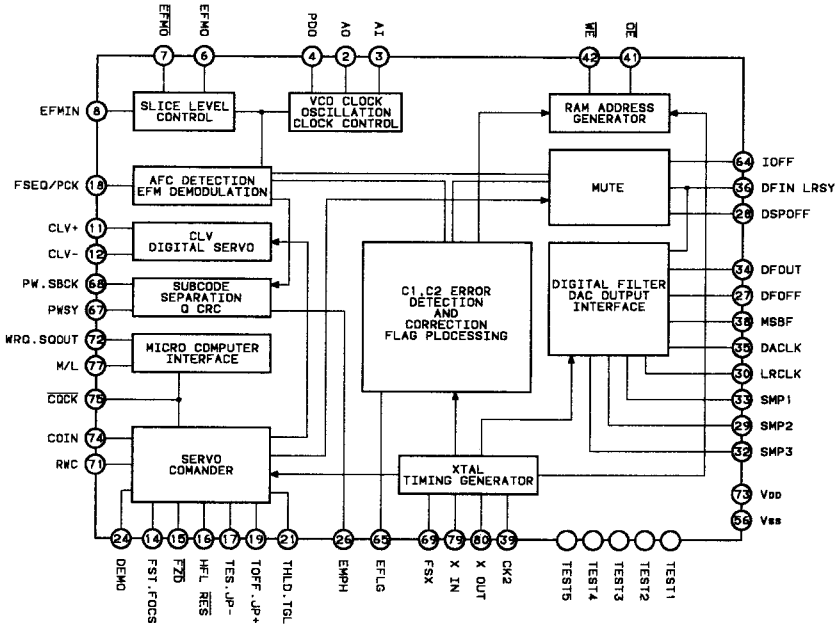

UPC4570HA BLOCK DIAGRAM

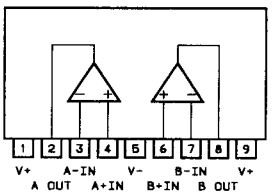

TA79L006P BLOCK DIAGRAM

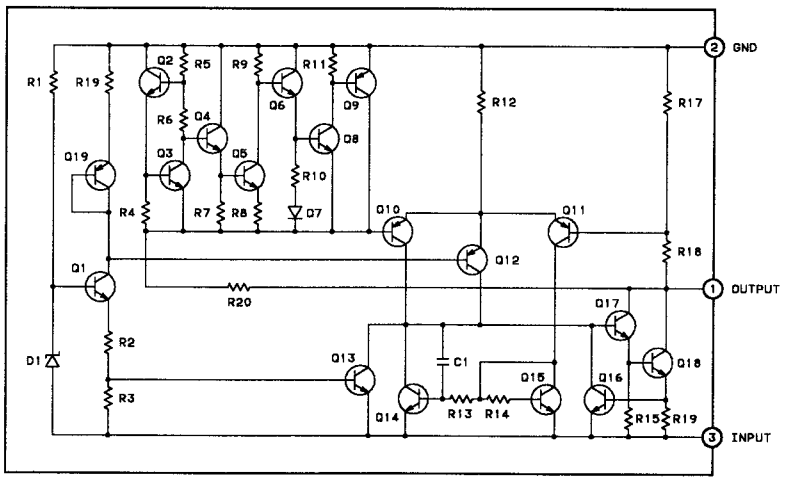

POINT TO POINT WIRING DIAGRAM

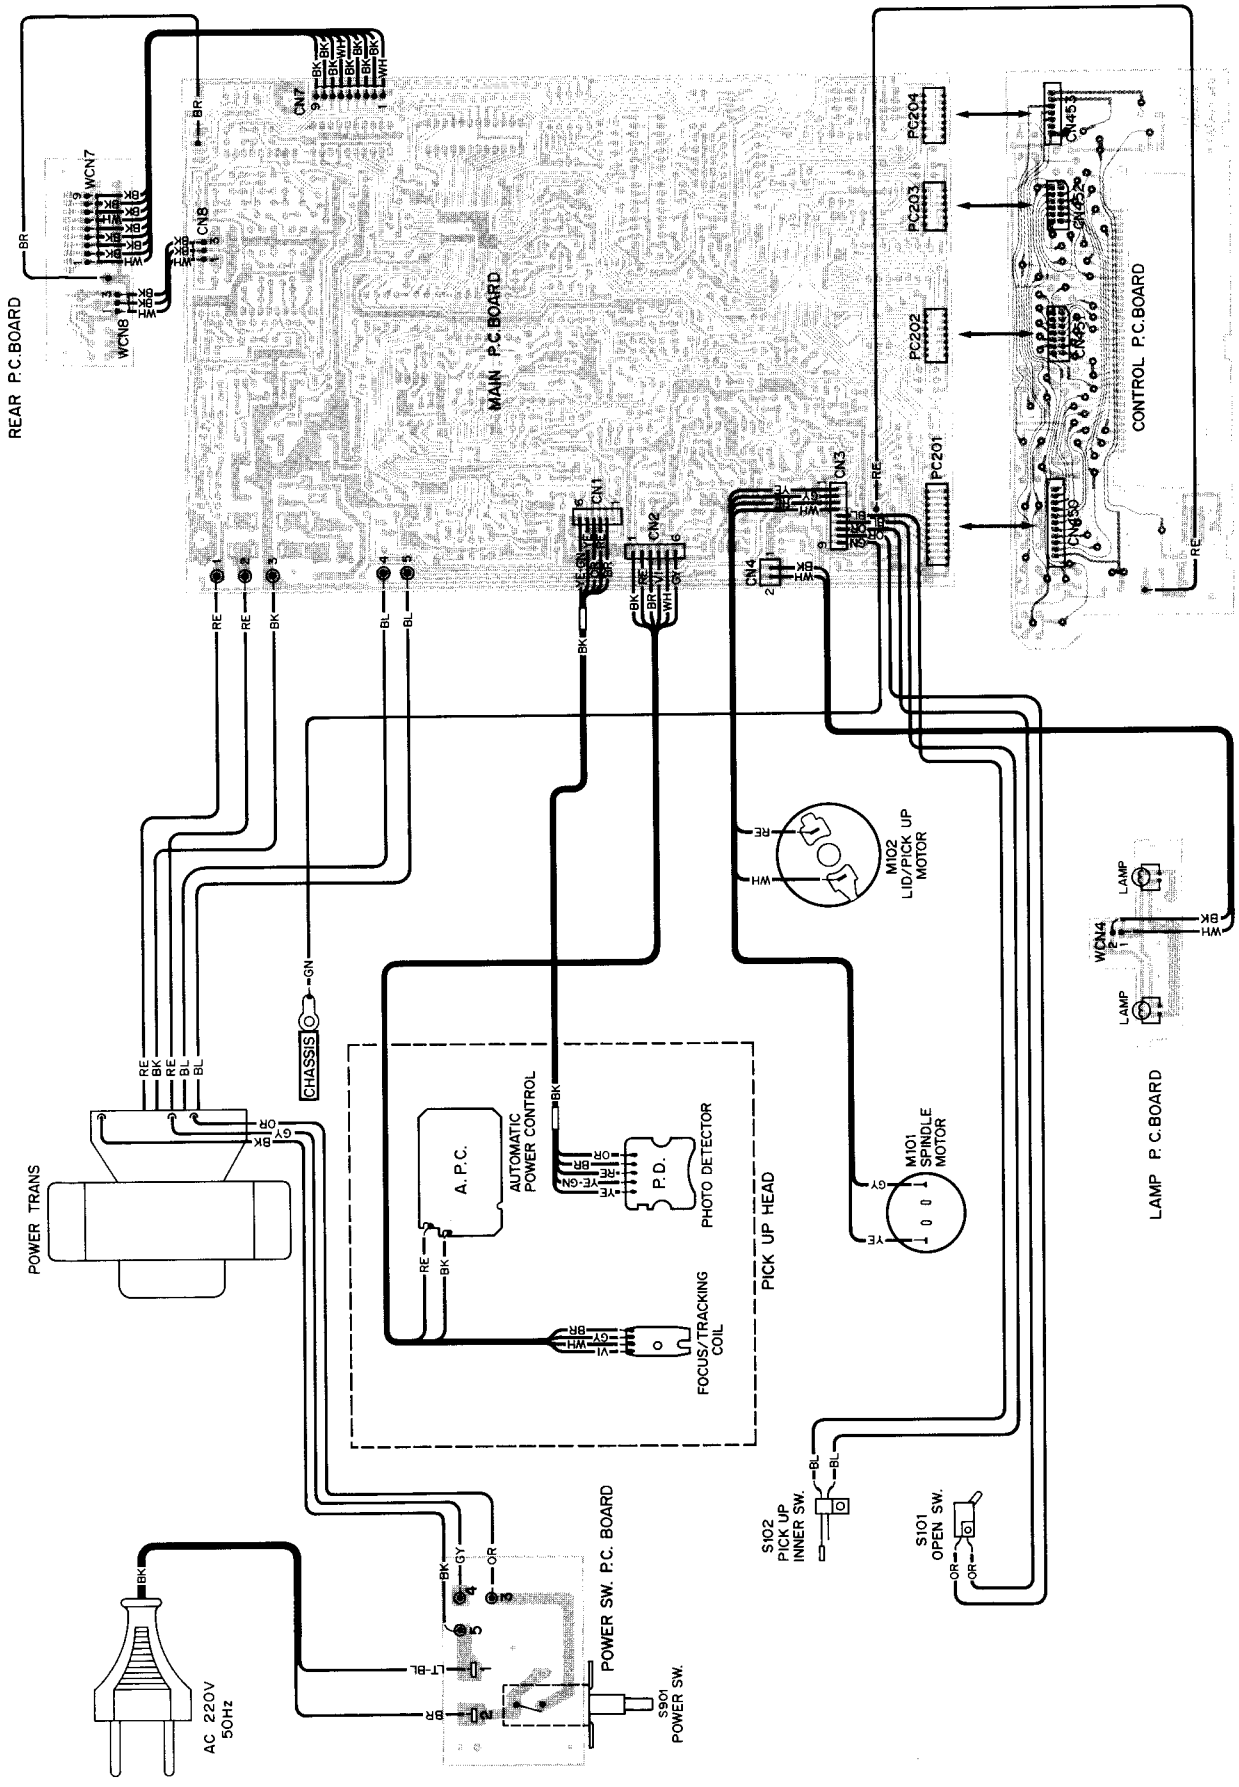

SCHEMATIC DIAGRAM

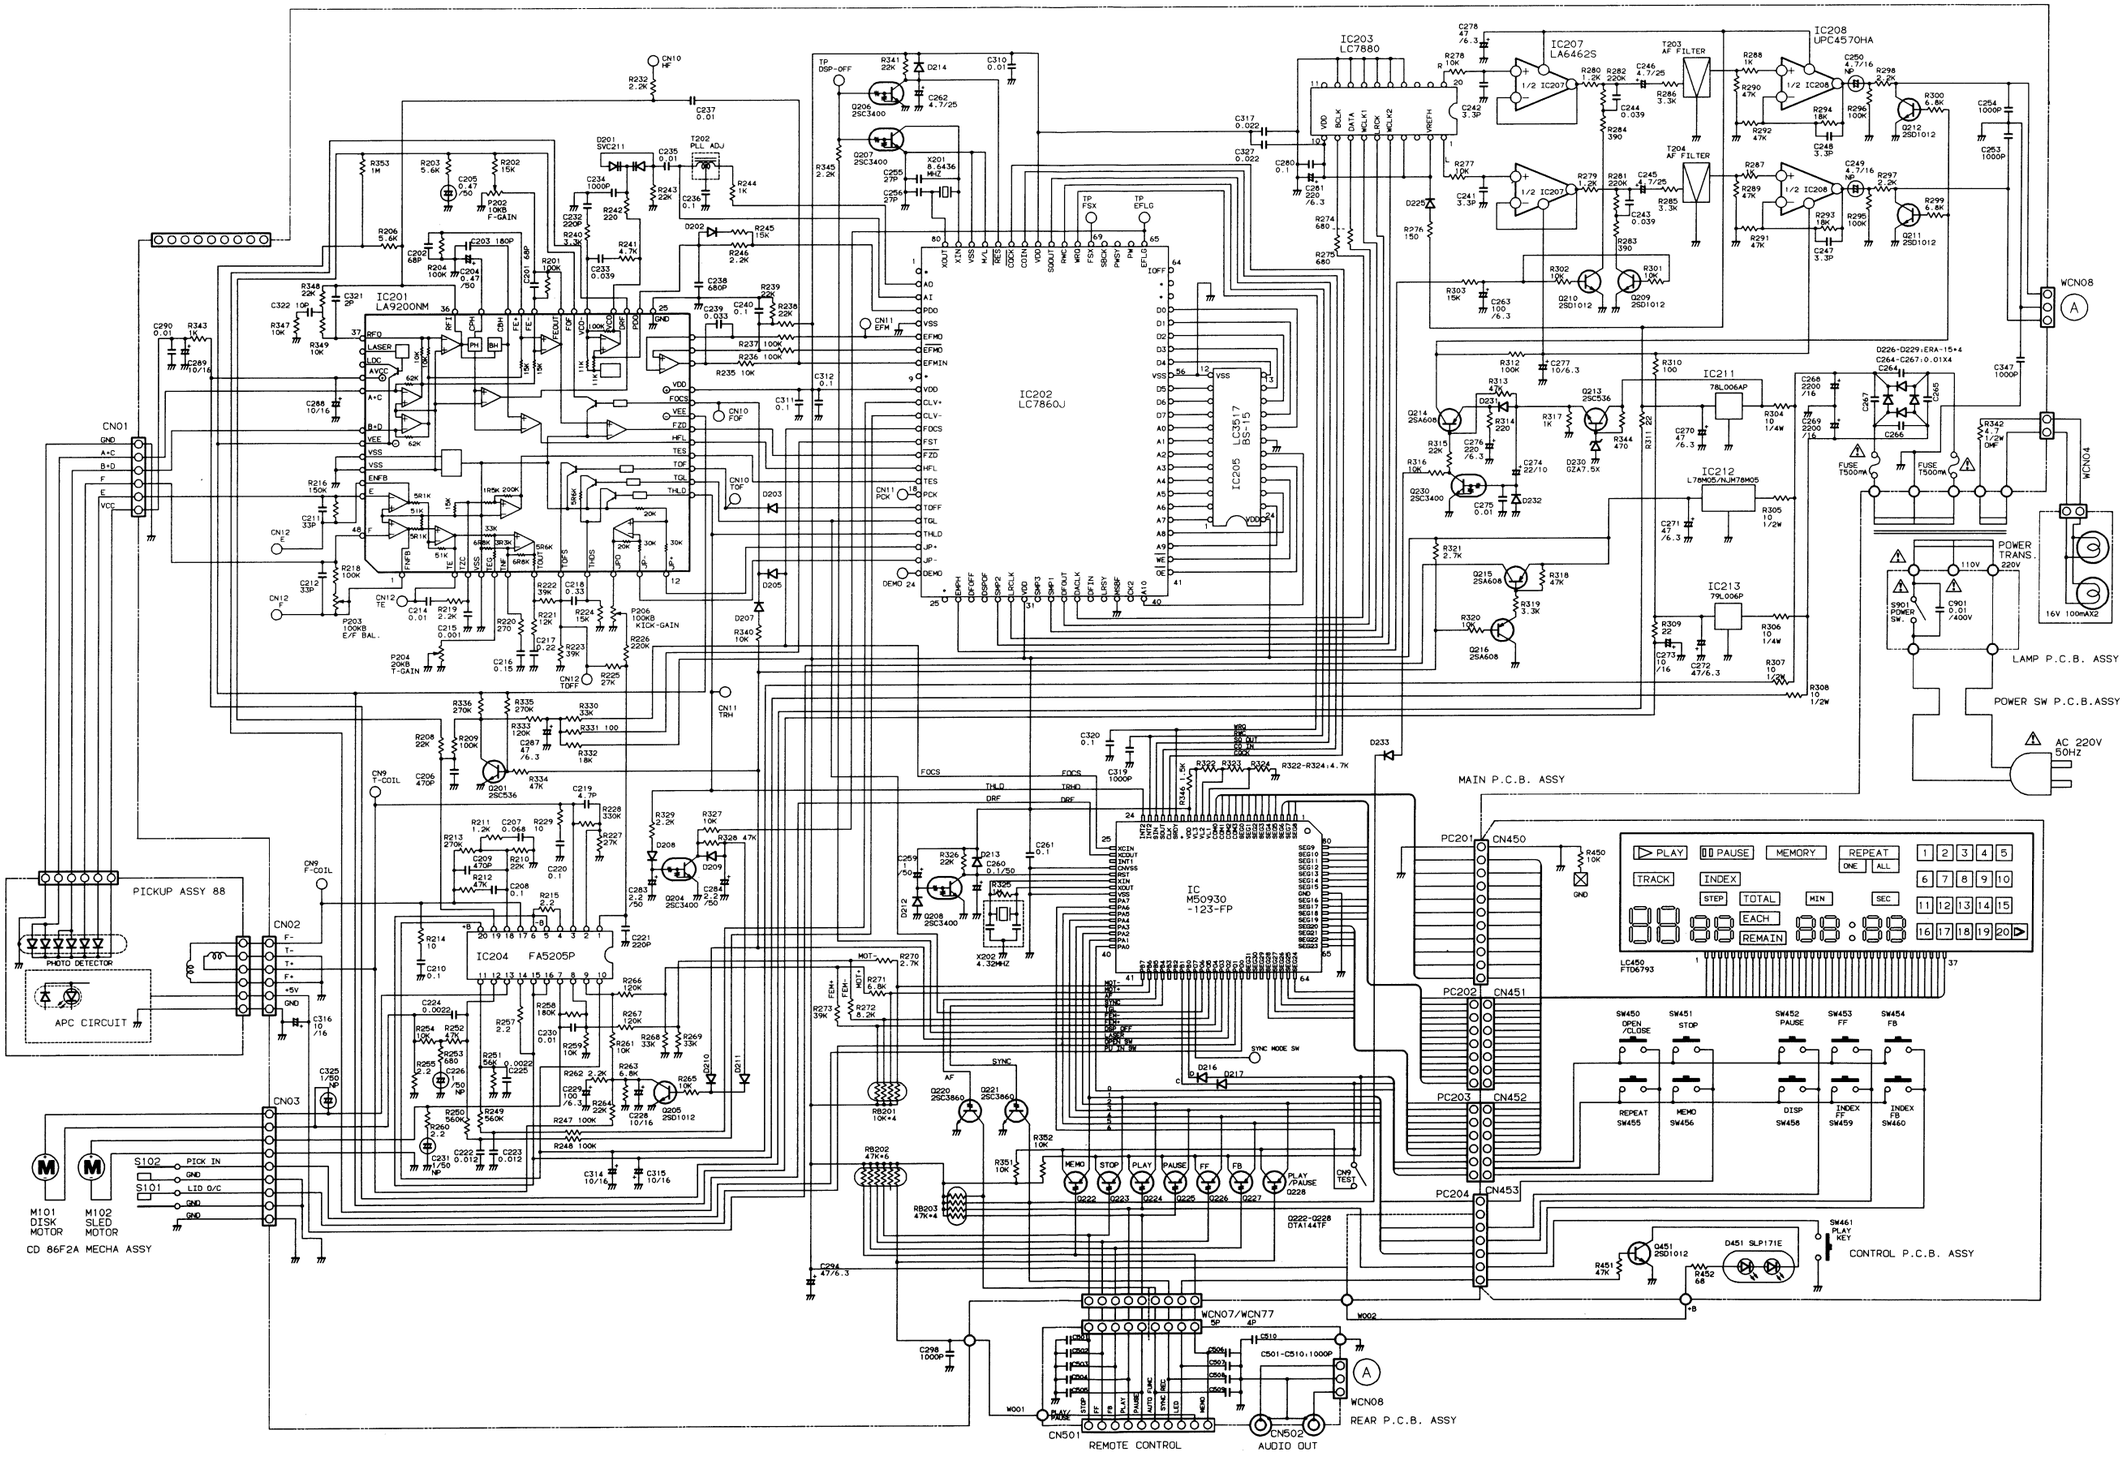

CONTROL PRINTED CIRCUIT BOARD
(BOTTOM VIEW)

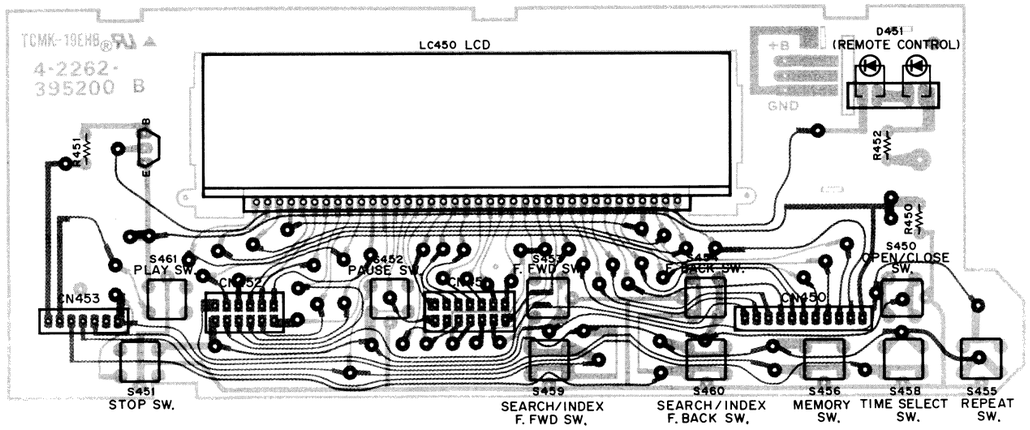

MAIN PRINTED CIRCUIT BOARD
(BOTTOM VIEW)

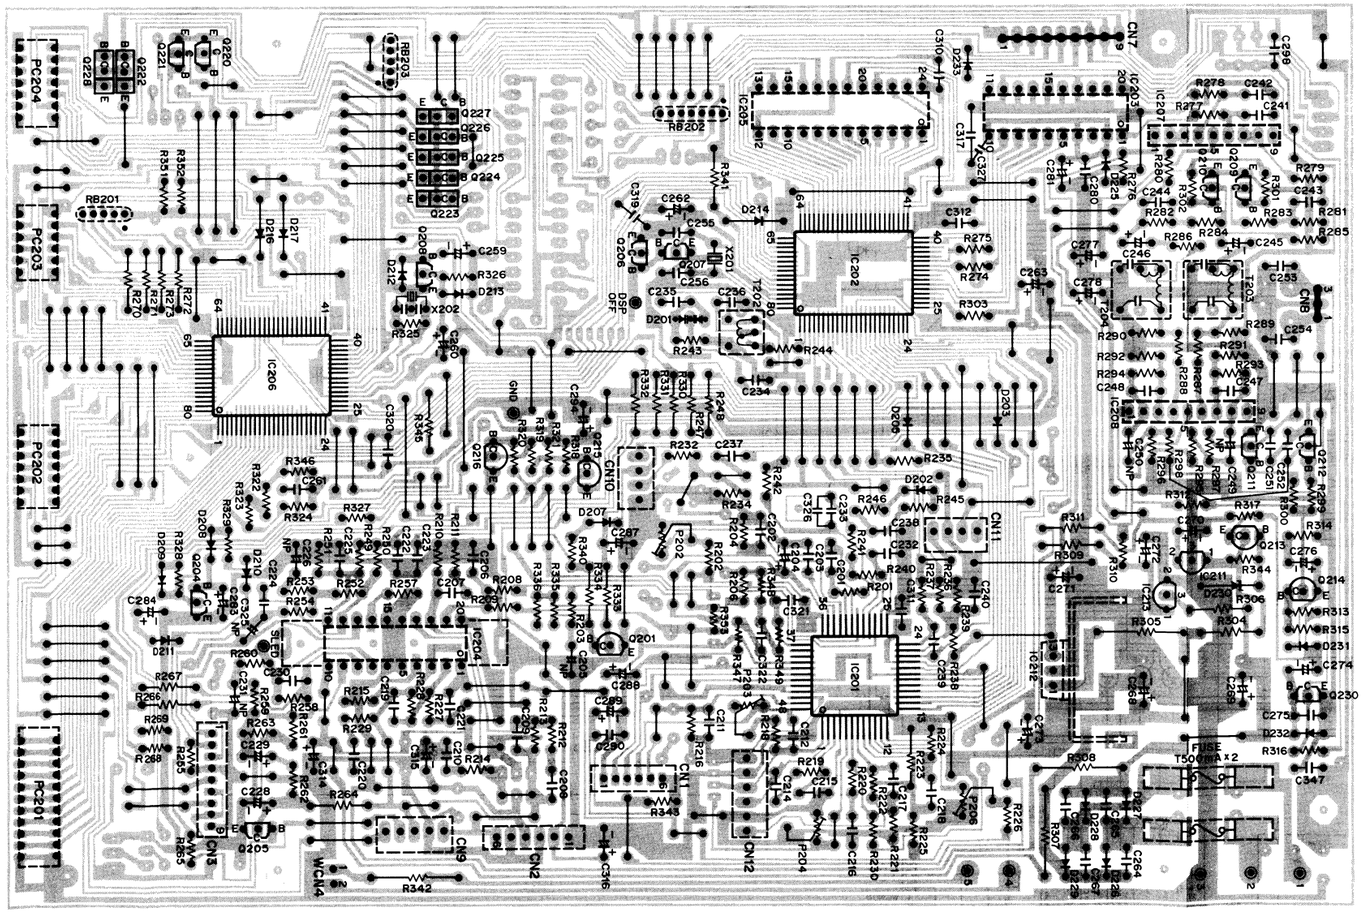

IC PIN NUMBERS DC VOLTAGES

Ref. No.	DEVICE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
IC201	LA9200NM	0V	0V	0.3V	0V	0V	0V	0V	0V	0V	0V	0.6V	0.6V	0V	4.9V	4.4V	4.3V	4.2V	4.2V	−5.6V	2.4V
		21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
		5.0V	2.7V	2.3V	2.3V	0V	2.4V	0V	2.5V	2.4V	0V	0V	0.6V	0.6V	0V	−0.2V	0V	0V	10.0V	4.5V	5.9V
		41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
		0V	0V	−5.6V	0V	0V	0V	0V	0V	-	-	-	-	-	-	-	-	-	-	-	-

IC PIN NUMBERS DC VOLTAGES

Ref. No.	DEVICE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
IC202	LC7860J	0V	2.6V	2.6V	2.4V	0V	2.4V	2.2V	2.7V	0V	5.0V	0.8V	0V	0.2V	0.2V	4.2V	4.2V	4.3V	0V	2.7V	4.9V
		21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
		0V	0.6V	0.6V	0V	0V	0V	1.1V	0V	5.0V	5.0V	5.0V	0V	5.0V	5.0V	0V	0V	5.0V	0V	0V	5.0V
		41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
		5.0V	5.0V	0V	0V	5.0V	5.0V	5.0V	5.0V	0V	5.0V	5.0V	0V	0.8V	0.8V	0.8V	0V	2.4V	2.4V	2.4V	2.4V
		61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
		2.4V	0.6V	0.6V	0.6V	0V	5.0V	0V	0.7V	0V	0V	0V	5.0V	5.0V	0V	5.0V	0V	0V	0V	0V	5.0V

IC PIN NUMBERS DC VOLTAGES

Ref. No.	DEVICE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
IC203	LC7880	2.6V	5.2V	0V	5.2V	5.0V	5.0V	5.0V	0V	0V	5.2V	2.5V	0V	0V	0V	0V	0V	0V	3.5V	0V	2.6V
IC204	FA5205P	0V	0V	0V	−13.1V	−13.7V	−13.7V	0V	0V	0V	12.7V	0V	0V	0V	−12.7V	−13.7V	−13.7V	0.6V	0V	0V	12.7V
IC207	LA6462SS	5.9V	2.6V	2.6V	2.6V	−5.0V	2.6V	2.6V	2.6V	5.9V	-	-	-	-	-	-	-	-	-	-	-
IC208	UPC4570HA	5.9V	0V	0V	0V	−5.0V	0V	0V	0V	5.9V	-	-	-	-	-	-	-	-	-	-	-
IC211	TA78L006	12.6V	5.9V	0V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
IC212	NJM78M	12.5V	0V	5.0V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
IC213	TA79L006	0V	−6.0V	−13.4V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
IC205	LC3517AS	5.0V	5.0V	5.0V	5.0V	0V	5.0V	5.0V	0V	0.8V	0.8V	0.8V	0V	2.4V	2.4V	2.4V	2.4V	2.4V	0V	5.0V	5.0V
		21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
		5.0V	0V	0V	5.0V	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-

IC PIN NUMBERS DC VOLTAGES

Ref. No.	DEVICE	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
IC206	M50930	0V	2.4V	2.4V	2.4V	2.4V	2.4V	2.4V	2.4V	2.4V	2.4V	2.4V	2.4V	2.4V	1.6V	3.2V	4.9V	5.0V	0.2V	0V	5.0V
		21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40
		0V	0V	0V	0V	0V	0V	0.6V	0V	5.0V	2.2V	1.9V	0V	5.0V	5.0V	5.0V	5.0V	5.0V	5.0V	5.0V	4.9V
		41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60
		0V	0V	4.9V	4.9V	0V	0V	4.7V	4.8V	4.9V	4.9V	0V	0V	4.9V	4.8V	5.0V	0V	2.4V	2.4V	2.4V	2.4V
		61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80
		0V	2.4V	2.4V	2.4V	0.8V	2.4V	0.8V	2.4V	2.4V	2.4V	2.4V	2.4V	0V	2.4V	2.4V	2.4V	2.4V	2.4V	2.4V	2.4V

IC & TRANSISTOR LEAD IDENTIFICATION

TRANSISTOR	FRONT VIEW	BOTTOM VIEW	TRANSISTOR	FRONT VIEW	BOTTOM VIEW
2SA608 2SC536			DTA144	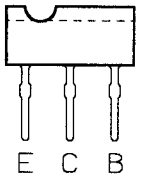	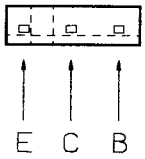
2SC3400 2SC3860 2SD1012					
TERMINAL NAME					
B → BASE C → COLLECTOR E → EMITTER					

LA6458SS FRONT/SIDE VIEWS

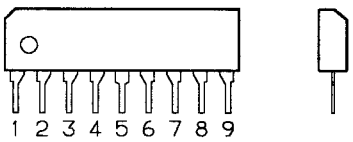

FA5205P TOP VIEW
LC7880 TOP VIEW

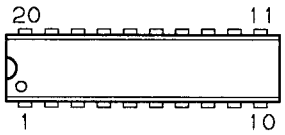

LC3517BS-15 TOP VIEW

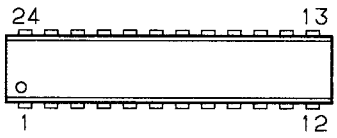

TA78L006AP FRONT/BOTTOM VIEWS
TA79L006P FRONT/BOTTOM VIEWS

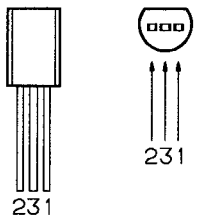

LA9200NM TOP/SIDE VIEWS

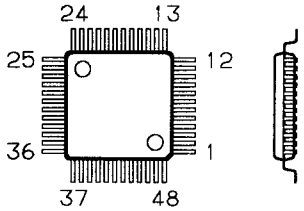

LC7860J TOP/SIDE VIEWS
M50930-123FP TOP/SIDE VIEWS

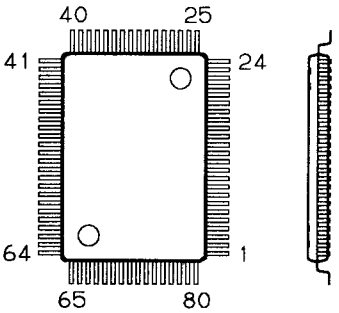

NJM78M05A TOP/SIDE VIEWS

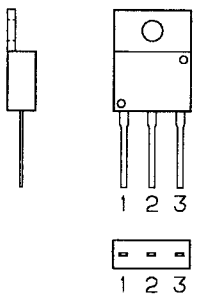

FISHER

FISHER Hi-Fi Europa Vertriebs GmbH

Stahlgruberring 4 Tel: 089/420 45-0
8000 München 82 Tlx: 524033

Technisches Labor/ Durchwahl -120/121
Qualitätskontrolle

Funkstörmeßlabor -127/128

Service-Zentrale
- Color TV -166
- Hi-Fi/Audio -168
- Video -172
- Autoradio -170
- Ersatzteillager -155/156
- Techn. Schulung -174

Weitere Service-Zentralen in BRD (keine Ersatzteilbestellungen)

Offenbach/ Frankfurt	Frankfurter Straße 121 6050 Offenbach	Tel: 069/88 80 45/48 Tlx: 4 12 558	Hamburg	Spaldingstraße 1 2000 Hamburg	Tel: 040/23 12 23/24 Tlx: 2 173 839
Military	Frankfurter Straße 121 6050 Offenbach	Tel: 069/88 80 45/48 Tlx: 4 12 558	Ditzingen	Max-Eyth-Straße 11 7257 Ditzingen	Tel: 07156/50 88 Tlx: 7 245 278
Düsseldorf-Erkrath	Albert-Einstein-Straße 8 4006 Erkrath 1	Tel: 0211/200 05-0 Tlx: 8 588 563	Berlin (Fisher Vertragswerkstatt)	Drewitz & Kaulbach Eisenacher Straße 53 1000 Berlin 62	Tel: 030/781 20 01 Tlx: 186 460

Unser FISHER-Team steht Ihnen jederzeit gerne zur Verfügung. Ersatzteilbestellungen wickeln Sie bitte ausschließlich mit unserer Service-Zentrale München ab.
Senden Sie uns im Garantiefall die ausgefüllte Garantiekarte ein. Bei unverkauften Lagergeräten des Fachhandels gilt als Garantienachweis eine eidesstattliche Versicherung mit eingetragener Modellbezeichnung und Geräte-Nummer oder ein Liefernachweis. Die gleiche Regelung besteht auch für Reparaturaufträge.
Bitte geben Sie unbedingt die Ersatzteil-Nummer und die Modellbezeichnung an.
Sie sparen so wertvolle Zeit. Vielen Dank.

A47500 October/'88/2,500/H **Printed in Japan**